# **FieldFox RF Handheld Analyzers**

#### 3 kHz to 4/6.5/10 GHz

N9912C		
N9913C	N9914C	N9915C
N9933C	N9934C	N9935C

# Introduction

The Keysight's new C-Series RF FieldFox handheld analyzers, led by the N9912C, offers the softwaredefined configuration to cover frequency of 3 kHz up to 4, 6.5, and 10 GHz. This data sheet summarizes their performance, as a vector network analyzer, a cable antenna analyzer, and/or a spectrum analyzer.





## **Table of Contents**

Definitions	3
Cable and Antenna Analyzer (CAT) and Vector Network Analyzer (VNA)	4
TDR Cable Measurements (Option 215)	13
VNA Time Domain (Option 010)	14
Mixed-Mode S-Parameters (Option 212)	14
Vector Voltmeter (VVM) (Option 308)	15
Spectrum Analyzer (Option SAx on N9912C and Option 233 on Combination Analyzers)	16
Tracking Generator or Independent Source	29
Real-Time Spectrum Analyzer (RTSA) (Option 350)	30
I/Q Analyzer (IQA) (Option 351)	31
Spectrum Analyzer IF Output	41
Preamplifier (Option 235)	41
Interference Analyzer and Spectrogram (Option 236)	42
Channel Scanner (Option 312)	42
89600 VSA Software	43
Over-the-Air (OTA) LTE FDD/TDD (Option 370/371)	44
EMF Measurements (Option 358)	50
Spectrum Analyzer Time Gating (Option 238)	52
Reflection Measurements (RL, VSWR) (Option 320, applicable to SA only models)	52
ERTA	54
Built-in Power Meter (Option 310)	55
External USB Power Sensor Support (Option 302)	56
Pulse Measurements (Option 330)	56
USB Power Sensor Measurements versus Frequency (Option 208)	57
Built-In GNSS (GPS+) Receiver (Option 307)	59
DC Bias Variable-Voltage Source (Option 309)	59
Remote Control Capability (Option 030)	60
General Information	61
FieldFox Physical Dimensions	65
Carry Precision with You	66



This data sheet provides the specified and typical performance of the FieldFox family of portable analyzers. This data sheet should be used in conjunction with the technical overviews and configuration guide, for a complete description of the analyzers.

The specifications and measurement capabilities listed in this document require certain options on the FieldFox analyzer. Refer to the FieldFox Configuration Guide to obtain option information. The configuration guide is the main resource for option/measurement capability information (http://literature.cdn.keysight.com/litweb/pdf/5992-3701EN.pdf).

## **Definitions**

## **Specification (spec)**

Specifications include guard bands to account for the expected statistical performance distribution, measurement uncertainties, and changes in performance due to environmental conditions. Specifications are warranted performance. FieldFox must be within its calibration cycle. No warm-up required for the specifications listed on pages 40 through 96.

## **Typical**

Describes additional product performance information not covered by the product warranty. It is performance beyond specifications that 80% of the units exhibit with a 90% confidence level over the temperature range  $23 \pm 5$  °C, unless otherwise noted. Typical performance does not include measurement uncertainty. FieldFox must be within its calibration cycle.

## Nominal

A general, descriptive term or design parameter. It is not tested, and not covered by the product warranty. FieldFox must be within its calibration cycle.



# Cable and Antenna Analyzer (CAT) and Vector Network Analyzer (VNA)

The performance listed in this section applies to the cable and antenna analyzer (referred to as CAT) and vector network analyzer (VNA) capabilities available in the following models:

Description	Model number
FieldFox RF & microwave (combination) analyzers	N9912C, N9913C, N9914C, N9915C

NOTE: Combination analyzers = Cable and antenna tester (CAT) + Vector network analyzer (VNA) + Spectrum analyzer (SA)

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

#### **Frequency specifications**

Series	Models	Frequency range
N991xC	N9912C	3 kHz to 4/6.5/10 GHz
	N9913C	3 kHz to 4 GHz
	N9914C	3 kHz to 6.5 GHz
	N9915C	3 kHz to 10 GHz

#### Frequency reference, -10 to 55 °C

Accuracy	± 0.9 ppm (spec) + aging
	± 0.5 ppm (typical) + aging
Accuracy, when locked to GPS	± 0.010 ppm (spec)
Accuracy, when GPS antenna is disconnected	± 0.4 ppm (nominal) <sup>1</sup>
Aging Rate	± 1 ppm/yr for 20 years (spec), will not exceed ± 3.5 ppm
Frequency resolution	Specification
3 kHz to 1.49961 GHz	0.67 Hz
≥ 1.49961 to 2.99961 GHz	1.34 Hz
≥ 2.99961 GHz to 5.99961 GHz	1.34 Hz
≥ 5.99961 GHz to 10 GHz	2.68 Hz
Data points or resolution	

101, 201, 401, 601, 801, 1001, 1601, 4001, 10,001

Arbitrary number of points settable through front panel and SCPI

#### IF bandwidth<sup>2</sup>

3 Hz, 10 Hz, 30 Hz, 100 Hz, 300 Hz, 1 kHz, 3 kHz, 10 kHz, 30 kHz, 100 kHz

#### System impedance

50  $\Omega$  (nominal), 75  $\Omega$  with appropriate adapter and calibration kit

<sup>&</sup>lt;sup>2</sup> VNA mode only. Recommend using averaging in CAT mode.



<sup>&</sup>lt;sup>1</sup> The maximum drift expected in the frequency reference applicable when the ambient temperature changes ±5°C from the temperature when the GPS signal was last connected.

## Test port output specifications

High power in the N991xC refers to the analyzer's target output power level when the Power Setting is High. An example:

• N991xC: For a 58.4 MHz to 10 GHz frequency sweep, the analyzer achieves an 8 dBm power level across the band.

Low power level for N991xC analyzers flattens at -50 dBm across the entire frequency band and is the analyzer's output when the Power Setting is Low.

Max leveled power in the N991xC refers to the maximum leveled (flattened) power achieved across the designated frequency range. An example:

• N991xC: For a 58.4 MHz to 10 GHz frequency sweep with the analyzer configured to measure all four S-parameters, needing both ports 1 and 2, the maximum power the analyzer can be set to is 7 dBm.

Test port output power (dBm), high power	Typical		
N991xC	Port 1 or Port 2		
3 kHz to 50 kHz	-12		
> 50 kHz to 150 kHz	-6		
> 150 kHz to 300 kHz	-2		
> 300 kHz to 800 kHz	0		
> 800 kHz to 3.45 MHz	2		
> 3.45 MHz to 58.4 MHz	5		
> 58.4 MHz to 10 GHz	8		
Test port output power (dBm), low power	Typical		
N991xC	Port 1 or Port 2		
3 kHz to 10 GHz	-50 dBm (flattened) ±0.5 dB		
Max leveled output power (dBm)	Nominal	Nominal	
N991xC	Port 1	Port 2	
>3.45 MHz to 58.4 MHz	5	5	
>58.4 MHz to 10 GHz	8	7	

#### Test west sufficient a survey (dDar) historie a survey

#### Output power range

CAT	High, low, and manual. Default (preset) power is manual, −15 dBm. Manual power is flattened.
VNA	High, low, and manual. Default (preset) power is manual, −15 dBm. Manual power is flattened.



## **Test port output specifications**

#### Power step size

Power settable in 1 dB steps across power range. Flat power, in 1 dB steps, is available across the whole frequency span, nominal.

Power level accuracy <sup>1</sup>	ТурісаІ
N991xC	Port 1 or Port 2 at -20 dBm
3 kHz to 300 kHz	± 0.6 dB
> 300 kHz to 10 GHz	± 0.5 dB

Power level linearity	Nominal
N991xC	Port 1 or Port 2, $-50 \text{ dBm} \le P < \text{max}$ leveled power
> 10 MHz to 10 GHz	± 0.45 dB

#### System performance specifications

System dynamic range<sup>2,3</sup> (dB), high power, 300 Hz IFBW, 100-point average, Port 1 or Port 2 (-10 to 55°C)

Frequency	S12 Spec	S12 Typical	S21 Spec	S21 Typical
3 kHz to 30 kHz	-	81	-	85
> 30 kHz to 1 MHz	-	110	-	114
> 1 MHz to 10 MHz	103	116	98	114
> 10 MHz to 4 GHz	105	118	106	117
> 4 GHz to 6.5 GHz	102	116	107	119
> 6.5 GHz to 10 GHz	103	116	104	116
Measurement speed (Swe	eep time)			
CAT			N991xC	
Return loss, 3 kHz to 10	GHz, 1-port cal, 1001	points	461 µs/pt	
Distance-to-fault, 100-meter cable, 1-port cal, 1001 points		1001 points	512 µs/pt	
VNA			N991xC	
S11 and S21, 30 kHz to 10 GHz, enhanced response cal, 100 kHz IF bandwidth, 1001 points		sponse cal,	200 µs/pt	-

<sup>&</sup>lt;sup>3</sup> For CAT mode, "Insertion loss (2-port)", decrease listed dynamic range specifications by 20 dB, as CAT mode IFBW is fixed at 10 kHz. Can obtain full dynamic range by using S21 measurement in VNA mode with 100 Hz IFBW.



<sup>&</sup>lt;sup>1</sup> Power levels are calibrated based on PNA-X tuned receiver for the entire frequency range.

<sup>&</sup>lt;sup>2</sup> System dynamic range is measured in the factory with loads on the test ports after a thru normalization.

Trace noise, high power, 300 Hz IFBW, Port 1 or Port 2		Specifications (-10 to 55°C)			
N991xC	Frequency	Magnitude (dB rms)		Phase (deg rms)	
	3 kHz to 50 kHz	0.0052 <sup>1</sup>		0.072 <sup>1</sup>	
	> 50 kHz to 5 GHz <sup>2</sup>	0.0011		0.011	
-	> 5 GHz to 10 GHz	0.0015		0.015	
Receiver compression			Typical		
N991xC	Frequency		Port 1 or	Port 2	
	250 kHz to 1.25 GHz		+8 dBm,	0.20 dB compression	
	> 1.25 GHz to 5 GHz		+8 dBm,	0.15 dB compression	
	> 5 GHz to 10 GHz	> 5 GHz to 10 GHz		+8 dBm, 0.10 dB compression	
Maximum input level	Port 1 or Port 2				
N991xC	Average CW power		DC		
	+25 dBm, 0.3 watts		±40 VDC		
Immunity to interfering signa	lls				
N991xC			Nominal		
On carrier frequency			+7 dBm		
Offset from carrier frequency	/ > 1 MHz	> 1 MHz		+7 dBm	
	> 10 MHz		+10 dBm		

## **CAT and VNA measurements**

#### CAT mode

CAT measurements	Distance-to-fault (dB), Distance-to-fault (Lin) Return loss (dB) Return loss & DTF (dB) VSWR Distance-to-fault (VSWR) Cable loss (1-port) Insertion loss (2-port) (requires option 211) TDR (Lin rho) (requires option 215), TDR (ohm) (requires option 215)
Distance-to-fault (DTF) settings Frequency/distance Sweep time Frequency mode	TDR & DTF (requires option 215) Start distance, stop distance Units: meters or feet (Can also be set as Preferences) Bandpass, lowpass
CAT mode averaging	Set sweep time in seconds
Distance-to-fault	Available in CAT mode. Standard on N991xC analyzers. Range = velocity factor x speed of light x (# of points -1) / freq.span x 2; # of points auto coupled according to start and stop distance entered. Resolution = range / (number of points -1) Transform modes: Bandpass, low-pass Window types: Maximum, medium, and minimum Alias free range indicator: On/Off Dispersion compensation for waveguide: Yes

<sup>1</sup> Typical values.

 $^{\rm 2}$  Excludes frequency range between 5 MHz and 25 MHz.



Return loss, log magnitude	-500 to 500 dB	
Log magnitude resolution	0.01 dB	
VSWR	1.01 to 1000	
VSWR resolution	0.01	
VNA mode		
VNA Transmission/Reflection (T/R)	S11, S21 magnitude and phase (requires option 210)	
VNA S-parameters	S11, S21, S22, S12 magnitude and phase (N9912C requires option NAx, other N991xC requires options 210 and 211)	
Number of traces	Four traces available: Tr1, Tr2, Tr3, Tr4	
Display formats	Single-trace	
	Dual-trace split (each trace on separate graticule)	
	Dual-trace overlay (both traces on one graticule)	
	Three-trace split (each trace on separate graticule)	
	Three-trace overlay (all three traces on one graticule)	
	Quad-trace split (each trace on separate graticule)	
	Quad-trace overlay (all four traces on one graticule)	
VNA trace formats	Log magnitude, linear magnitude, VSWR, phase, Smith chart, polar, group delay, unwrapped phase, real impedance, imaginary impedance, Z magnitude	
Frequency settings	Start, stop, center, span	
Frequency sweep type	Linear	
Sweep type trigger	Continuous, single	
Sweep trigger source	Internal, external, point (point trigger applies to 1-port cal only)	
Sweep trigger slope	Positive, negative	
Sweep trigger delay	0 to 10 seconds	
Averaging	Sweep: 2 to 1000; Point: 2 to 500	
Smoothing	Computes the moving average of adjacent data points. Smoothing aperture defines the trace width (number of points) to be averaged. Minimum aperture: 0.05% of frequency span Maximum aperture: 25% of frequency span	
Scale	Autoscale, scale, reference level, reference position Autoscale: Automatically selects scale resolution and reference value to center the trace. Autoscale all: Scales all visible traces.	
S11, log magnitude	-500 to 500 dB	
Log magnitude resolution	0.01 dB	



VSWR	1.01 to 1000	
VSWR resolution	0.01	
Phase	-180 to +180 degrees (unwrapped phase can show larger values)	
Phase resolution	0.01 degrees	
Phase offset	-360 to +360 degrees	
Magnitude offset	-100 to +100 dB	
Trace math	Vector division or subtraction of current linear measurement values and memory data	
Port extension	For both port 1 and port 2, delay settings. Port extensions apply to all measurements.	
Marker formats	Default marker format is the trace format. Other formats: R + jX; Z magnitude; Phase; Real; Imaginary Mag & Phase dB Angle	
General CAT / VNA modes		
Marker functions	Peak, Next Peak, Peak Left, Peak Right, Mkr→Center, Mkr→Delay, Min Search, Peak Excursion, Peak Threshold, Target, Bandwidth (BW, Q, Loss), Tracking CAT mode only: Tracking 3 peaks (CAT mode), Marker→Start distance, Marker→Stop distance	
Marker table	On/Off	
Marker types	Normal, delta, data trace and memory trace markers	
Marker coupling	On/Off (coupling between traces)	
Frequency blanking	Security level: none, high. If high, all frequency information is blanked out. An instrument preset is required to re-enable the frequency information.	
Display data	Display data, memory, data and memory, or data math	
Trace math	One memory trace per data trace.	



## **CAT and VNA mode calibrations**

FieldFox analyzers offer three tiers of calibrations, thus providing users with different levels of calibration effort and accuracy.

#### CalReady

CalReady is the most basic calibration and is sufficient for a quick pass/fail or go/no go verification. Every FieldFox is calibrated at the factory, at test ports 1 and 2, at room temperature. CalReady can be applied either as an "enhanced response CalReady" or a "2-port CalReady." The default setting is 2-port CalReady, so correction is applied to both ports. A user preference allows user to change the CalReady methodology to enhanced response CalReady.

A 30-minute warm-up period is recommended for a quick test. A 60-minute warm-up is necessary for more stringent test requirements.

If CalReady is the basis for most measurements, the annual cal cycle must be followed, as the CalReady calibration will be updated during the annual cal cycle.



## **Standard calibrations**

Standard calibrations are the most accurate calibrations offered in FieldFox. FieldFox's calibration engine is based on Keysight's flagship PNA calibration engine, and as such, offers many of the standard calibrations. FieldFox supports both coaxial and waveguide calibrations. The table below lists the commonly used calibrations.

Keysight recommends a 30-minute warm-up period for standard calibrations. For ultimate in stability and accuracy, a 90-minute warm-up period is necessary.

Frequency response Open response Short response Thru response With and without isolation	Simultaneous magnitude and phase correction of frequency response errors for either reflection or transmission measurements. Isolation corrects for crosstalk errors.
1-port OSL (Port 1) 1-port OSL (Port 2)	Open, short, and load Traditional 1-port calibration for reflection measurements. Corrects for directivity, source match, and frequency response errors.
SSL (for waveguide)	For waveguide calibrations, depending on the calibration kit definition, this is presented as a short, offset short and load calibration.
Enhanced response (also known as one-path, two-port) Forward enhanced response Reverse enhanced response	Corrects for frequency response and source match. Partial correction for load match for low-loss reciprocal devices.
QSOLT (2-port)	QSOLT or Quick short-open-load-thru is FieldFox's default recommended calibration for insertable devices. Full 12-term error correction. Requires fewer connections, compared to traditional SOLT (4 compared to 7). Corrects for directivity, source match, reflection frequency response, load match, and transmission frequency response.
Full 2-port (unknown thru calibration)	FieldFox's default recommended calibration for non-insertable devices. Full 12- term error correction. Beneficial for characterizing non-insertable devices such as Type-N to 3.5 mm, or female-female devices. Corrects for directivity, source match, reflection frequency response, load match, and transmission frequency response.
TRL	TRL or thru-reflect-line compensates for directivity, reflection, and transmission frequency response in both the forward and reverse directions.

\*\* Note: FieldFox does not offer the traditional SOLT calibration. Instead, it offers the more accurate Full 2-port (unknown thru), and also QSOLT.

## **ECal**

FieldFox supports all Keysight USB ECal modules, both standard and value-line ECals.



## FieldFox's guided calibration wizard

FieldFox's calibration wizard recommends a calibration type and calibration kit based on selected parameters and connector types. Alternatively, users can select their own calibration type and calibration kit. FieldFox's calibration wizard ensures a valid calibration selection.

#### Interpolation error correction

With any type of accuracy enhancement applied, interpolated mode recalculates the error coefficients when the test frequencies are changed. The number of points can be increased or decreased, and the start/stop frequencies can be changed, but the resulting frequency span must be a subset of the original calibration frequency span.

#### Connectors

The FieldFox firmware supports the following connector types by default. Add other connector types with a calibration kit that contains the connector type.

Coaxial	Waveguide	
Type-N 50 ohm	WR-10	WR-90
Type-N 75 ohm	WR-15	WR-112
7/16	WR-19	WR-137
TNC	WR-22	WR-159
Type-F	WR-28	WR-187
7 mm	WR-34	WR-229
3.5 mm	WR-42	WR-284
2.92 mm	WR-51	WR-650
2.4 mm	WR-62	
1.85 mm	WR-75	

### **FieldFox S-parameter measurement uncertainties**

The configurations listed below include measurement uncertainties based on ISO GUM methodology calculations.

FieldFox model	Calibration kit	Calibration type	DUT connector	Uncertainty
N991xC	85518A or 85519A	Full 2-port calibration	Type-N	Spec
N991xC	85054D	Full 2-port calibration	Type-N	Spec
N991xC	N7554A	Full 2-port calibration	Type-N	Spec
N991xC	N4690D	Full 2-port calibration	Type-N	Spec



# **TDR Cable Measurements (Option 215)**

The performance listed in TDR cable measurements, VNA time domain, mixed-mode S-parameters and vector voltmeter sections applies to the capabilities available in the following models:

Description	Model number	
FieldFox RF & microwave (combination) analyzers	N9912C, N9913C, N9914C, N9915C	

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

The TDR cable option adds time domain reflectometry (TDR) measurements to FieldFox's CAT mode. FieldFox's TDR measurements are based on an inverse Fourier transform of the frequency-domain data. TDR measurements are useful in not only identifying the location of faults along cables, but also the nature of the fault. Resistive, inductive and capacitive faults will each have a different response. These differences help engineers and technicians' trouble-shoot line faults.

Measurements: TDR (linear rho), TDR (ohm), TDR & DTF

Y-axis: linear (rho) or impedance (ohm)

X-axis: distance (meters or feet)



# VNA Time Domain (Option 010)

In time-domain mode, FieldFox computes the inverse Fourier transform of the frequency-domain data to display reflection or transmission coefficients versus time.

#### Setup parameters

Time	Start, stop, center, span	
Gating	Start, stop, center, span, and on/off	
Numbers of points, velocity	y vector, line loss, window shape, independent control for all four traces	
Time stimulus modes		
Low-pass step	Low-pass step is similar to a traditional time domain reflectometer (TDR) stimulus waveform. It is used to measure low-pass devices. The frequency-domain data should extend from DC (extrapolated value) to a higher value.	
Low-pass impulse	Low-pass impulse response is used to measure low-pass devices.	
Bandpass impulse	The bandpass impulse simulates a pulsed RF signal and is used to measure the time domain response of band-limited devices.	
Windows		
The windowing function ca in the time domain respons	in be used to filter the frequency domain data and thereby reduce overshoot and ringing se.	
Windows	Minimum, medium and maximum, manual entry of Kaiser Beta and impulse width.	
Gating		
converting back to the freq	e used to selectively remove reflection or transmission time domain responses. In Juency domain, the effects of the responses outside the gate are removed. The results on and off, using two traces.	
Gate types	Notch, bandpass	
Gate shapes	Maximum, wide, normal, minimum	

## **Mixed-Mode S-Parameters (Option 212)**

Mixed-mode S-parameters are also known as balanced measurements. Not available for N9912C.

#### Measurements

Scc11	Common mode reflection	
Sdd11	Differential mode reflection	
Scd11	Differential mode stimulus, common mode response	
Sdc11	Common mode stimulus, differential mode response	

FieldFox's mixed-mode S-parameter measurements require the use of the default factory calibration or a user 2-port calibration. So, the FieldFox analyzer must be equipped with 2-port measurement functionality to measure mixed-mode S-parameters. Mixed-mode S-parameters are an extension of the VNA capabilities.



# Vector Voltmeter (VVM) (Option 308)

With vector voltmeter mode, you can characterize the difference between two measurements easily. The zeroing function allows you to create a reference signal and characterize the difference between two device measurements. The results are shown on a large display in digital format.

Models	Options	Frequency range
N9912C	NA4 and 308	3 kHz to 4 GHz
	NA6 and 308	3 kHz to 6.5 GHz
	NAX and 308	3 kHz to 10 GHz
N9913C	308	3 kHz to 4 GHz
N9914C	308	3 kHz to 6.5 GHz
N9915C	308	3 kHz to 10 GHz

#### Setup parameters

1-port cable trimming	Reflection (S11 or S22 measurement), magnitude and phase	
2-port transmission	Transmission or S21 measurement, magnitude, and phase	
A/B and B/A	Ratio of two receivers or channels, magnitude, and phase – Need an external signal generator for the A/B or B/A measurement	
Frequency (one CW frequency point)		
	IF bandwidth: 10 Hz to 100 kHz or 3 Hz to 30 kHz	
	Output power: Low, high, manual	

## Ratio accuracy (A/B and B/A)

Must zero before measuring DUT. Recommend using a high-quality power splitter or 6 dB attenuators to minimize uncertainty due to mismatch.

	Frequency	Nominal (dB)
N991xC	100 kHz to 2 GHz	± 0.2



# Spectrum Analyzer (Option SAx on N9912C and Option 233 on Combination Analyzers)

The performance listed in this section applies to the spectrum analyzer capabilities available in the following models:

Description	Model number
FieldFox RF combination analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

## **Frequency and time specifications**

Models	Options	Frequency range <sup>1</sup>
N9912C	SA4	3 kHz to 4 GHz
	SA6	3 kHz to 6.5 GHz
	SAX	3 kHz to 10 GHz
N9913C	233	3 kHz to 4 GHz
N9914C	233	3 kHz to 6.5 GHz
N9915C	233	3 kHz to 10 GHz
N9933C		3 kHz to 4 GHz
N9934C		3 kHz to 6.5 GHz
N9935C		3 kHz to 10 GHz

#### Frequency reference, -10 to 55°C

Accuracy	± 0.9 ppm (spec) + aging	
	± 0.5 ppm (typical) + aging	
Accuracy, when locked to GPS	± 0.01 ppm (spec)	
Accuracy, when GPS antenna is disconnected	± 0.4 ppm (nominal) <sup>2</sup>	
Aging rate	± 1 ppm/yr for 20 years (spec), will not exceed ± 3.5 ppm	
Frequency readout accuracy (start, stop, center, ma	rker)	
Frequency readout accuracy (start, stop, center, ma ± (readout frequency x frequency reference	rker) Horizontal resolution = frequency span / (trace points – 1)	
Frequency readout accuracy (start, stop, center, ma	rker)	

<sup>&</sup>lt;sup>1</sup> The spectrum analyzer is tunable to 0 Hz or DC.

<sup>&</sup>lt;sup>2</sup> The maximum drift expected in the frequency reference applicable when the ambient temperature changes ± 5°C from the temperature when the GPS signal was last connected.



#### Marker frequency counter

Accuracy	± (marker frequency x frequency reference accuracy + counter resolution)
Resolution	0.1, 1, 10 Hz
Frequency span	Spec
Range	0 Hz (zero span), 10 Hz to maximum frequency range of instrument
Resolution	1 Hz
Accuracy	± (2 x RBW centering + horizontal resolution) for detector = Normal
Sweep time readout	Measured value of the time required to complete a sweep from start to finish, including time to tune receiver, acquire data, and process trace.
Trace update	Nominal
Span = 20 MHz, RBW,	9 updates per second
VBW = 3 kHz	
Span = 100 MHz, RBW, VBW autocoupled	25 updates per second
Center frequency tune and transfer <sup>1</sup>	Nominal
101 points, zero span	80 ms
101 points, 1 MHz span	75 ms
101 points, 100 MHz span	75 ms
Sweep time, zero span	Nominal
Range	1 µs to 6000 s
Resolution	100 ns
Readout	Entered value representing trace horizontal scale range
	Trigger (for zero span and FFT sweeps)
Trigger type	Free run, external, video, RF burst
Trigger slope	Positive edge, negative edge
Trigger delay	Range: -150 ms to 10 s
	Resolution: 100 s
Auto trigger	Forces a periodic acquisition in the absence of a trigger event
	Range: 0 (off) to 30 s
Trigger position (zero span)	Controls horizontal position of the pulse edge; use sweep time to zoom into pulse edge
	Range: 0 to 10, integer steps; 0 is left edge of graticule, 10 is right edge of



## Frequency and time specifications

RF burst trigger <sup>1</sup>	Nominal
Dynamic range	40 dB
Bandwidth	20 MHz
Operating frequency range	20 MHz to maximum instrument frequency

Resolution bandwidth (RBW)	Nominal		
Range (-3 dB bandwidth)			
Zero span	10 Hz to 5 MHz	1, 3, 10 sequence	
Non-zero span	1 Hz to 5 MHz	1, 1.5, 2, 3, 5, 7.5, 10 sequence < 300 kHz, 300 kHz, 1 MHz, 3 MHz, 5 MHz (Other RBV may be set depending on settings)	
		Step keys change RBW in 1, 3, 10 sequence	
Selectivity (-60 dB / -3 dB)	4:1		
Bandwidth accuracy		Nominal	
Zero span	10 Hz to 1 MHz	± 5%	
	3 MHz	± 10%	
	5 MHz	± 15%	
Non-zero span	1 Hz to 100 kHz	± 1%	
	300 kHz to 1 MHz	± 5%	
	3 MHz	± 10%	
	5 MHz	± 15%	
Video bandwidth (VBW)			
	1 Hz to 5 MHz	1, 1.5, 2, 3, 5, 7.5, 10 sequence	

<sup>&</sup>lt;sup>1</sup> Within full frequency range of instrument, not band dependent.



## Frequency and time specifications

	Nominal
10 Hz to 1 MHz	± 5%
3 MHz	± 10%
5 MHz	± 15%
1 Hz to 100 kHz	± 1%
300 kHz to 1 MHz	± 5%
3 MHz	± 10%
5 MHz	± 15%
1 Hz to 5 MHz	1, 1.5, 2, 3, 5, 7.5, 10 sequence
	3 MHz         5 MHz         1 Hz to 100 kHz         300 kHz to 1 MHz         3 MHz         5 MHz

## Amplitude accuracy and range specifications

Measurement range	DANL to +20 dBm		
Input attenuator range	0 to 40 dB, in 5 dB steps		
Preamplifier	Nominal		
Frequency range	Full band (3 kHz to maximur	m frequency of instrument)	
Gain	+20 dB, 3 kHz to 10 GHz		
Max asfa innut laval	Average CW power	DC	
Max safe input level	Average Cw power		
	+25 dBm, 0.3 watts	± 40 VDC	
		± 40 VDC	
Display range	+25 dBm, 0.3 watts 10 divisions	± 40 VDC	

	Spec (-10 to 55°C)	lypical (-10 to 55°C)
N991xC/N993xC	± 0.60	± 0.20

<sup>&</sup>lt;sup>1</sup> The spec and typical values, with preamp on, are identical to that with preamp off, but the input signal levels are -40 to -20 dBm

#### Total absolute amplitude accuracy (dB)

10 dB attenuation, input signal -15 to -5 dBm, peak detector, preamplifier off1, 300 Hz RBW, all settings auto-coupled, includes frequency response uncertainties. No warm-up required.

		Spec (-10 to 55°C)	Typical (-10 to 55°C)
N991xC/N993xC	3 kHz to 100 kHz <sup>2</sup>	± 1.00	± 0.20
	≥ 100 kHz to 15 MHz <sup>3</sup>	± 0.80	± 0.23
	≥ 15 MHz to 500 MHz	± 0.80	± 0.28
	≥ 500 MHz to 4.5 GHz	± 1.00	± 0.25
	≥ 4.5 GHz to 10 GHz	± 1.20	± 0.29

Resolution bandwidth switching uncertainty	Nominal
RBW < 5 MHz	0.0 dB
For signals not at center frequency	0.7 dB peak-to-peak
RF input VSWR	Nominal
RF input VSWR 1 MHz to 2.7 GHz	Nominal
•	

#### **Reference level**

Range	-210 to +90 dBm	
Traces		
Detectors	Normal, positive peak, negative peak, sample, average (RMS)	
States	Clear/write, max hold, min hold, average, view, blank	
	Number of averages: 1 to 10,001	
Number	4: all four can be active simultaneously and in different states	
Markers		
Number of markers	6	
Туре	Normal, delta, marker table	
Marker functions	Noise, band power, frequency counter	
Audio beep	Volume and tone change with signal strength	
Marker table	Display 6 markers	
Marker→	Peak, next peak, peak left, peak right, center frequency, reference level, minimum	
	Tune frequency, for AM/FM tune and listen	
Marker properties	Peak criteria: peak excursion, peak threshold	
	Delta reference fixed: Off or On	
	Time zero fixed: Off or On	

 <sup>&</sup>lt;sup>1</sup> The N991xC and N993xC preamp on specification uses 20 dB attenuation, input signal -25 to -15 dBm. All the total absolute amplitude accuracy (Spec and Typical values) listed apply with preamp on unless noted otherwise.
 <sup>2</sup> For frequencies 3 to 100 kHz, total absolute amplitude accuracy spec is ±1.2 dB and typical value is ±0.3 dB with preamplifier

<sup>&</sup>lt;sup>3</sup> Typical value is  $\pm$  0.31 dB with preamp on.



on.

## **Dynamic range specifications**

#### Displayed average noise level (DANL) - (dBm)

Input terminated, RMS detection, log averaging, 0 dB input attenuation, reference level of -20 dBm, normalized to 1 Hz RBW, measured at non-zero frequency span

	Pream	Preamp off		np on
N991xC and N993xC	Spec (-10 to 55°C)	Typical (-10 to 55°C)	Spec (-10 to 55°C)	Typical (-10 to 55°C)
3 kHz to 20 kHz	-115	-130	-131	-152
≥ 20 kHz to 100 kHz	-129	-138	-131	-152
≥ 100 kHz to 1 MHz	-129	-138	-148	-160
≥ 1 MHz to 15 MHz	-137	-142	-148	-160
≥ 15 MHz to 2.6 GHz	-139	-147	-157	-164
≥ 2.6 GHz to 4.5 GHz	-140	-146	-158	-163
≥ 4.5 GHz to 7.5 GHz	-139	-145	-156	-162
≥ 7.5 GHz to 10 GHz	-135	-142	-153	-159



Residual responses (dBm)		Nominal	
Input terminated preamp off, 0	dB attenuation		
N991xC/N993xC	9 kHz to 10 MHz	-93	
	$\geq$ 10 MHz to 10 GHz <sup>1</sup>	-105	
1 dB gain compression point (	P1dB) <sup>2</sup> - (dBm)		Nominal
	10 MHz to 100 MHz		0
	≥ 100 MHz to 500 MHz		+2
	≥ 500 MHz to 8 GHz		+4
	≥ 8 GHz to 10 GHz		+7.5

Second harmonic distortion			Nominal
-30 dBm signal at mixer input		SHI (dBm)	Distortion (dBc)
N991xC, N993xC	10 to 50 MHz	+45	-75
	≥ 50 MHz to 1.3 GHz	+50	-80
	≥ 1.3 to 3.75 GHz	+30	-60
	≥ 3.75 to 5 GHz	+50	-80


Third order intermodulation d	Typical	
Two -15 dBm signals, 100 kHz		
N991xC, N993xC	50 MHz to 500 MHz	+6.5
	≥ 500 MHz to 2.6 GHz	+10
	≥ 2.6 GHz to 7.5 GHz	+8.5
	≥ 7.5 GHz to 10 GHz	+10.5
Spur free dynamic range (dB)	Nominal	
N991xC, N993xC		>104

<sup>&</sup>lt;sup>2</sup> Tested with two-tone signals: the first tone signal at -30 dBm mixer input and the second tone with 40 MHz spacing from the first tone at mixer input. Step up the power of the second tone until 1 dB compression has been achieved. 0 dB attenuation, span of 5 kHz, and 30 Hz RBW.



<sup>&</sup>lt;sup>1</sup> Excludes 3.3114375 GHz at -98 dBm.

# Distortion and noise limited (10 Hz RBW) dynamic range (nominal)

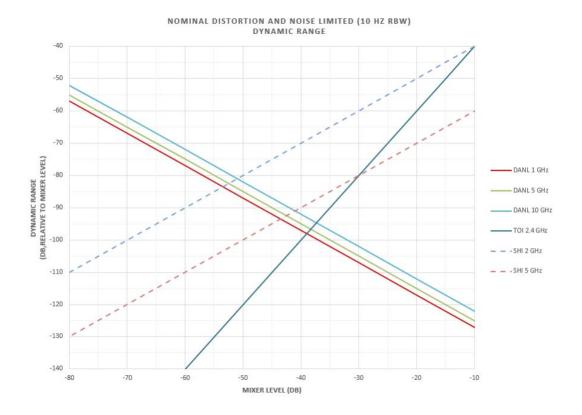




## SSB phase noise at 1 GHz center frequency

Phase noise (dBc/Hz) SSB phase noise at 1 GHz


Offset	Spec (-10 to 55°C)	Typical (-10 to 55°C)
10 kHz	-107	-112
30 kHz	-109	-113
100 kHz	-105	-110
1 MHz	-119	-124
3 MHz	-123	-129
5 MHz	-124	-129

## Phase noise at different center frequencies (nominal)

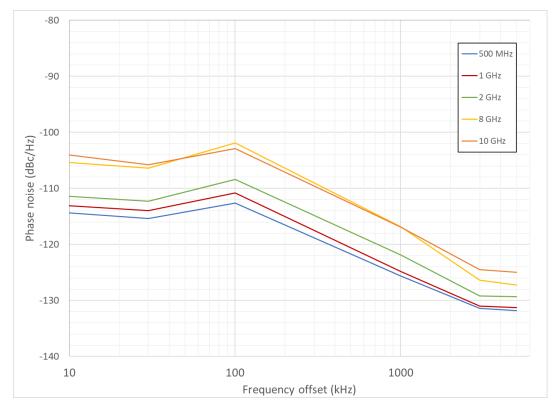



# Dynamic range versus offset frequency versus RBW (nominal)<sup>1</sup>

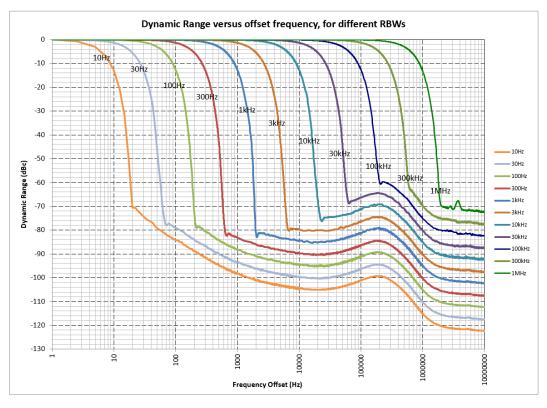

<sup>&</sup>lt;sup>1</sup> For 1 MHz RBW, the sideband observed may degrade the dynamic range to -68 dBc



## **Baseband mode**

The performance listed in this section applies to the signal path of "Baseband" for the spectrum/signal analyzer. Switch to the "Baseband" mode to optimize the analyzer's performance if the input signal is below 6.5 MHz. Preamp is not applicable to the baseband signal path.

#### Frequency range for Baseband

	Specs
N991xC/N993xC	3 kHz to 6.5 MHz

#### Frequency span for Baseband

	S	pecs					
Range	(	0 Hz (zero span), 10 Hz to maximum frequency range for baseband (6.5 MHz)			lHz)		
Resolution bandwidth (RBW)	for Bas	eband					
Range (-3 dB bandwidth)	No	minal					
Zero span	10	Hz to 5 M	Hz		1,	3, 10 sequence	
Non-zero span	1 Hz to 5 MHz			<3 (O	1.5, 2, 3, 5, 7.5, 10 sequence for R 00 kHz, 300 kHz, 1 MHz, 3 MHz, 5 ther RBWs may be set depending ( tings)	MH	
Amplitude range for Basebar	and					ep keys change RBW in 1, 3, 10 quence	
		Specs					
Measurement range		DANL to +20 dBm					
Input attenuator range	0 to 40 dB, in 5 dB step		steps				
Max safe input level for Base	band						
		Avera	age CW pov	/er		DC	
		+25 c	lBm, 0.3 W	att		±40 VDC	
Total absolute amplitude acc	uracy fo	or Basebar	d (dB)				
10 dB attenuation, input signal frequency response uncertainti	–12 dBr es. No v	n, peak det /arm-up rec	ector, pream juired.	plifier off, 30 ⊦	lz RB	W, all settings auto-coupled, includes	
				Nominal			
N991xC/N993xC	3	3 kHz to 100 kHz ± 1		± 1			
	≥ ′	100 kHz to	500 kHz	± 0.6			
	≥ ;	500 kHz to	6.5 MHz	±0.9			
Input VSWR for Baseband			Nominal				
20 kHz to 6.5 MHz			1.6 :1				



# **Spectrum Analyzer**

## **Baseband mode**

#### Displayed average noise level (DANL) for Baseband (dBm)

RBW, measured at nor	-zero frequency span.				
	Typical (-10 to 5	5°C)			
3 kHz to 20 kHz	-150				
≥ 20 kHz to 100 kHz	-160				
≥ 100 kHz to 2 MHz	-160				
≥ 2 MHz to 6.5 MHz	-161				
1 dB gain compression	on point (P1dB) <sup>1</sup> for Baseban	d (dBm)	Nomina	al	
25 kHz to 5 MHz -6.5					
≥ 5 MHz to 6.5 MHz -7					
Second harmonic dis	tortion for Baseband			Nom	inal
-30 dBm signal at mix	er input	SHI (dBm)		Dist	ortion (dBc)
	3 kHz to 1 MHz	+35		-65	
	> 1 MHz to 3.25 MHz	+30		-60	
Third order intermode	Ilation distortion (TOI) for Ba	aseband (dBc)			Nominal
Two –28 dBm tones	at input mixer, spaced by 10	)0 kHz, 0 dB input	t attenuatio	on	
N991xC, N993xC		275 kHz to 6.5	5 MHz		-76
Residual responses fo	r Baseband (dBm)				Nominal
•					
	mp off, 0 dB attenuation				

#### Phase noise for Baseband (dBc/Hz) SSB phase noise at 5 MHz center frequency

Offset	Nominal
10 kHz	-130
30 kHz	-133
100 kHz	-135
≥ 400 kHz	-136

<sup>&</sup>lt;sup>1</sup> Tested with two-tone signals: the first tone signal at -30 dBm mixer input and the second tone with 22.5 MHz spacing from the first tone at mixer input. Step up the power of the second tone until 1 dB compression has been achieved. 0 dB attenuation, span of 5 kHz, and 30 Hz RBW.



# **Tracking Generator or Independent Source**

The performance listed in this section applies to the tracking generator and independent source capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

# See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

Note: Traditional tracking generators track the receiver frequency only. In FieldFox analyzers, the tracking generator frequency can be set to either track the receiver frequency, or act as an independent CW source.

Models	Options	Tracking generator or independent source frequency range	
N9912C	SA4 w/ 220	3 kHz to 4 GHz	
	SA6 w/ 220	3 kHz to 6.5 GHz	
	SAX w/ 220	3 kHz to 10 GHz	
N9913C	233 w/ 210	3 kHz to 4 GHz	
N9914C	233 w/ 210	3 kHz to 6.5 GHz	
N9915C	233 w/210	3 kHz to 10 GHz	
N9933C	220	3 kHz to 4 GHz	
N9934C	220	3 kHz to 6.5 GHz	
N9935C	220	3 kHz to 10 GHz	
Power step size			
	Power settable in 1	dB steps across power range	
Functions			
Mode	Continuous wave (CW), CW coupled, tracking (swept frequency)		
Operations	Normalization, frequency offset, spectral reversal		



# **Tracking Generator or Independent Source**

Output power (max) (dBm)	Frequency	Typical	
N991xC, N993xC	300 kHz to 10 GHz	+10	
Power level accuracy <sup>1</sup>		Nominal	
	Frequency	Port 1 at -20 dBm	
N991xC, N993xC	300 kHz to 10 GHz	± 0.5 dB	
Dynamic range (dB)	Frequency	Typical (−10 to 55°C)	Nominal
		Preamp off	Preamp on
N991xC, N993xC	300 kHz to 2 MHz	89	107
	≥ 2 MHz to 2.6 GHz	99	115
	≥ 2.6 to 7 GHz	98	113
	≥ 7 to 7.5 GHz	97	113
	≥ 7.5 to 10 GHz	95	110

<sup>&</sup>lt;sup>1</sup> N991xC power levels are calibrated based on PNA-X's tuned receiver, which means primarily the fundamental is included (for frequencies ≥ 10 MHz). For frequencies < 10 MHz, power levels are calibrated in the factory using a broadband power sensor.</p>



# Real-Time Spectrum Analyzer (RTSA) (Option 350)

The performance listed in this section applies to the real-time spectrum analyzer capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

Models	Options	Tracking generator or independent source frequency range <sup>1</sup>
N9912C	SA4 w/ 350	3 kHz to 4 GHz
	SA6 w/ 350	3 kHz to 6.5 GHz
	SAX w/ 350	3 kHz to 10 GHz
N9913C	233 w/ 350	3 kHz to 4 GHz
N9914C	233 w/ 350	3 kHz to 6.5 GHz
N9915C	233 w/350	3 kHz to 10 GHz
N9933C	350	3 kHz to 4 GHz
N9934C	350	3 kHz to 6.5 GHz
N9935C	350	3 kHz to 10 GHz

Real-time	analysis
-----------	----------

Measurements	Density Spectrum, Sp	pectrogram, Real-time	Spectrum
Maximum real-time bandwidth	10 MHz (Standard)	40 MHz (Opt B04)	120 MHz (Opt B10)
Resolution bandwidth			
(Span dependent, 20 ≤ Span/RBW ≤ 280)	1 Hz to 500 kHz	1 Hz to 2 MHz	1 Hz to 5 MHz
Minimum signal duration with 100% probability of intercept (POI) at full amplitude accuracy	9.13 µs	6.13 µs	5.52 µs
Minimum detectable signal <sup>2</sup>	11 ns	11 ns	47 ns
Min. acquisition time (Density Spectrum)	20 ms	20 ms	20 ms
Min. acquisition time (Spectrogram)	500 µs/div	500 µs/div	500 µs/div
Max. acquisition time (Density Spectrum)	540 ms	337 ms	336 ms
Max. acquisition time (Spectrogram)	10 s/div	10 s/div	10 s/div
Spurious-free dynamic range	69 dB	65 dB	62 dB
IF flatness	0.1 dB (typical)	0.1 dB (typical)	0.1 dB (typical)
FFT rate	190,000 FFT/s	190,000 FFT/s	190,000 FFT/s
Number of display points	821	821	821

<sup>&</sup>lt;sup>1</sup> Performance specified above 1 MHz. Usable down to 3 kHz

<sup>&</sup>lt;sup>2</sup> Minimum detectable pulse width is the shortest pulse width of a pulsed CW signal that will display a peak amplitude that is no worse than 60 dB below the peak amplitude of a CW signal of the same power level for a defined span and auto-coupled RBW.



# **RTSA (Option 350)**

Traces

Number of traces	4: all four can be active simultaneously and in different states	
Detectors	Normal, positive peak, negative peak, sample, average (RMS)	
States	Clear/write, max. hold, min. hold, average, view, blank	
Markers		
Number of markers	6	
Туре	Normal, delta, peak	
Marker $\rightarrow$	Peak, next peak, center frequency, reference level	
Trigger		
Trigger type	Free run, external, video, RF burst, periodic	

# I/Q Analyzer (IQA) (Option 351)

The specifications in this section apply to the I/Q analyzer capabilities available in the following models:

Description	Model number	
FieldFox RF (combination) analyzers	N9913C, N9914C, N9915C (N9912C excluded)	
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C	

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

	Models	I/Q analysis frequency range <sup>1</sup>
N991xC and N993xC	N9913C, N9933C	1 MHz to 4 GHz
	N9914C, N9934C	1 MHz to 6.5 GHz
	N9915C, N9935C	1 MHz to 10 GHz
Measurements		

Measurements
--------------

Spectrum (frequency domain)	Magnitude spectrum
Waveform (time domain)	RF envelope
	I/Q waveform (Dual simultaneous top and bottom windows: I vs. time and Q vs. time)

#### **Display (multi-domain) User Defined**

Set up and display up to 4 simultaneous and multi-domain measurements with any combination of the following: • Frequency domain: Magnitude spectrum

- Time domain: RF envelope, Q vs. I (polar plot), Phase vs. time, Unwrapped phase vs. time, I vs. time, Q vs. time
- Time summary table showing I/Q capture settings: I/Q capture time, waveform start/stop, Spectrum FFT time

<sup>&</sup>lt;sup>1</sup> Performance specified above 1 MHz. Usable down to 3 kHz.



I/Q capture parameters	Capture time, sample ra	ate, sample period, captur	e samples
I/Q streaming (Requires Option 353, not for N9912C)			.25 M Sample data/sec (or either VITA49A or Decodio
Bandwidth options	10 MHz (Standard)	40 MHz (Opt B04)	120 MHz (Opt B10)
Frequency span	10 Hz to 10 MHz	10 Hz to 40 MHz	10 Hz to 120 MHz
IF frequency responses			
Bandwidth options	10 MHz (Standard) Typical (-10 to 55°C)	40 MHz (Opt B04) Typical (-10 to 55°C)	120 MHz (Opt B10) Typical (-10 to 55°C)
IF flatness		,	,
Magnitude Phase deviation from linearity <sup>1</sup>	±0.06 dB 0.39º peak-to-peak 0.14º rms	±0.07 dB 1.3º peak-to-peak 0.6º rms	±0.18 dB 7.6º peak-to-peak 3º rms
Group delay flatness (peak-to-peak) <sup>1</sup>	1.19 ns	0.9 ns	2 ns
EVM accuracy			
Bandwidth options N991xC, N993xC	10 MHz (Standard) Nominal	40 MHz (Opt B04) Nominal <sup>2</sup>	120 MHz (Opt B10) Nominal <sup>2</sup>
EVM (at center frequency 1 GHz)			
5G NR 64 QAM	_	_	1.00%
LTE-A FDD TM3.1 (10 MHz)	0.50%	0.50%	0.50%
LTE-A FDD TM3.1 (20 MHz)	—	0.50%	0.50%
WCDMA TM4 (5 MHz)	0.60%	0.60%	0.60%
EVM (at center frequency 2.1 GHz)			
LTE-A FDD TM3.1 (10 MHz)	0.60%	0.60%	0.60%
LTE-A FDD TM3.1 (20 MHz)	—	0.65%	0.65%
WCDMA TM4 (5 MHz)	0.84%	0.84%	0.84%
EVM (at center frequency 3.5 GHz)			1.00%
5G NR 64 QAM	—	 0.05%/	1.00%
LTE-A FDD TM3.1 (20 MHz) EVM (at center frequency 5.8 GHz)		0.95%	0.95%
5G NR 64 QAM	_	_	1.10%
Data acquisition			1.1070
Total capture memory	1024 MB		
Length single I/Q capture	8 bytes/sample		
Maximum length I/Q capture	128 MSa		
Sample rate (I/Q pairs)	1.25 x span		
ADC resolution	14 bits		

 <sup>&</sup>lt;sup>1</sup> Not guaranteed below 50 MHz
 <sup>2</sup> Applies when fast channel equalization (default) is OFF..



Maximum I/Q capture time		
120 MHz span	0.89 s	
100 MHz span	1 s	
40 MHz span	2.6 s	
10 MHz span	10.7 s	
1 MHz span	107 s	
100 kHz span	1073 s	
10 kHz span	10737 s	

# **Dynamic range specifications (wideband path)**

Displayed average noise level (DANL) (dBm)			
Input terminated, RMS detection, log averaging, 0 dB input attenuation, reference level of -20 dBm, normalized to 1 Hz RBW, measured at non-zero frequency span			
N991xC (N9912C excluded), N993xC Preamp OFF Preamp ON			
	Typical (-10 to 55°C)	Typical (-10 to 55°C)	
3 kHz to 1 MHz	-135	-152	
≥ 1 MHz to 120 MHz	-149	-165	
≥ 120 MHz to 2.6 GHz	-150	-165	
≥ 2.6 GHz to 7.5 GHz	-150	-164	
≥ 7.5 GHz to 10 GHz	-146	-161	



# **Dynamic range specifications (wideband path)**

Spur free dynamic range (dB) at 2.	4 GHz 2/3 (TOI - DANL)	Nominal
		> 105
Third order intermodulation distortion (TOI) (dBm)		Typical
Two -20 dBm signals, 100 kHz spa	cing at mixer input (-10 to 55°C)	
N991xC and N993xC	50 MHz	to 500 MHz +7.0
	≥ 500 M	Hz to 2.6 GHz +8.0
	≥ 2.6 GF	Hz to 7.5 GHz +6.5
	≥ 7.5 GF	Hz to 10 GHz +10.5
Traces		
Number of windows & layout	1, 2 (top & bottom), 3 (one	e top, two bottom), or 4 (quad display)
Number of traces	4, all four traces can be a	ctive simultaneously in all windows
States	Clear/write, max hold, min hold, average, view, blank	
Markers		
Number of markers	6 normal + delta pairs	
Туре	Normal, delta, peak, marker table (up to 6 markers)	
Couple markers	On/off (couple markers between traces in different windows)	
Marker $\rightarrow$	Peak, next peak, center frequency, reference level	
Trigger		
Trigger type	Free run, external, video,	RF burst
Trigger slope	Positive edge, negative edge	dge
Trigger delay Range: -150 ms to 500 ms		ns
	Resolution: 100 ns	
Auto trigger Forces a periodic acquis		ion in the absence of a trigger event
	Range: 0 (off) to 30 s	
Data Storage		
Data types	Trace, Trace+state, pictur	re (PNG)
I/Q capture data file types	CSV, text (TXT), SDF (compatible with 89600 VSA software), Matlab (MAT)	
	Raw binary interleaved I/Q data recording, REAL32 (ASCII is default)	



# Noise Figure (NF) (Option 356)

The specifications in this section apply to the noise figure measurement capabilities available in the following models:

Description	Model number	
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C	
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C	

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

No warm-up is required for the instrument specifications.

	Models	Trackir	ng generator or independent source frequency range
N991xC, N993xC	N9913C, N9933C	10 MH	z to 4 GHz
	N9914C, N9934C	10 MH	z to 6.5 GHz
	N9915C, N9935C	10 MH	z to 10 GHz
Measurements			
Noise figure	Noise figure (F dB)		
Noise factor	Noise figure as a ratio (F)	)	
Gain	Gain (G dB)		
Noise temperature	Noise temperature in Kelv	vin (K)	
Y-factor	Y-factor (Y dB)		
Setup parameters			Supplemental information
Noise source			Load ENR value(s)
DUT type	Amplifier, Downconverter Upconverter, Multi-stage		Built-in GUI wizard aids DUT measurement setur
Integration	Mode	Auto	Auto Integration: optimizes gain to avoid compression, and measurement time to achieve jitter goal
		Fixed	Fixed Integration: the time per point over which the measurement is averaged is fixed
	Jitter goal		Sets measurement jitter performance target
	Max time / point		Allows user to trade-off jitter vs. measurement time
	Jitter warning		On: displays circles on trace data if jitter goal is exceeded
			Off (default): disables trace circle indicators
Loss compensation	Before DUT, After DUT		User definable, compensates measurement for loss (dB) before and after DUT

Range

5 MHz (default), 2 MHz, 1 MHz, 300 kHz



# NF

#### Frequency reference

			Refer to spectrum analyzer specifications
Noise figure uncertainty calculator		calculator	Supplemental information
			Built-in Based on data from measurement
DUT	Mode	Spot	Applies single values uniformly across frequency: Input  Γ  and Output  Γ  Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed
			Γ distribution: Rayleigh, Fixed, Uniform in Circle
		Table	Applies a table of values vs. frequency: Input  Г  and Output  Г
			Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed
			Γ distribution: Rayleigh, Fixed, Uniform in Circle
Preamplifier	Mode	Spot	Applies single values uniformly across frequency Input  Γ  and Output  Γ  Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed
			Γ distribution: Rayleigh, Fixed, Uniform in Circle
		Table	Applies a table of values vs. frequency: Input  Γ  and Output  Γ  Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed
			Γ distribution: Rayleigh, Fixed, Uniform in Circle



Noise figure uncertainty calculator		alculator	Supplemental information		
			Built-in Based on data from measurement		
Noise source	ENR Spot Mode		Applies single values uniformly across frequency: ENR (dB), ENR Uncertainty (dB), On  Γ , Off  Γ , ENR Uncertainty Confidence (SD) Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed Γ distribution: Rayleigh, Fixed, Uniform in Circle		
		Table	<ul> <li>Applies a table of values vs. frequency: ENR (dB), ENR Uncertainty (dB), On  Γ , Off  Γ , ENR Uncertainty Confidence (SD)</li> <li>Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed</li> <li>Γ distribution: Rayleigh, Fixed, Uniform in Circle</li> </ul>		
Uncertainty contributions	Jitter		Random independent events (fluctuations) within the bandwidth occurring during the noise measurement		
	ENR		Excess noise ratio of the hot noise source connected to the DUT during the measurement		
	Mismatch		Errors resulting from reflections due to impedance differences between components		
	User calibration		Errors due to the optional user calibration which is performed with a defined noise standard (ENR source) connected to the input of an LNA, and fixturing/cables used in the DUT measurement, and port 2 of the FieldFox		
Uncertainty coverage			User settable, uncertainty coverage can be set to 1 $\sigma$ (80%), 2 $\sigma$ (95% default), 3 $\sigma$ (99.5%)		
Uncertainty bars	-		Displays vertical bars representing the calculated measurement uncertainty overlaid on the trace data		
Loss compensation					User definable, single value, compensates measurement for insertion loss (dB) before DUT
	After DU	Г	User definable, single value, compensates measurement for loss (dB) after DUT		
Instrument match			VSWR values are preloaded and automatically applied for instrument and U7227A/C/F or U7228A/C/F preamplifiers		



Noise figure uncertainty calculator		lculator	Supplemental information		
			Built-in		
			Based on data from measurement		
Noise source	ENR Spot Mode		<ul> <li>Applies single values uniformly across frequency: ENR (dB), ENR Uncertainty (dB), On  Γ , Off  Γ , ENR Uncertainty Confidence (SD)</li> <li>Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed</li> <li>Γ distribution: Rayleigh, Fixed, Uniform in Circle</li> </ul>		
		Table	<ul> <li>Applies a table of values vs. frequency: ENR (dB), ENR Uncertainty (dB), On  Γ , Off  Γ , ENR Uncertainty Confidence (SD)</li> <li>Γ specification style: Maximum, 95th percentile, 80th percentile, Median, Mean, Fixed</li> <li>Γ distribution: Rayleigh, Fixed, Uniform in Circle</li> </ul>		
Uncertainty contributions	Jitter		Random independent events (fluctuations) within the bandwidth occurring during the noise measurement		
	ENR		Excess noise ratio of the hot noise source connected to the DUT during the measurement		
	Mismatch		Errors resulting from reflections due to impedance differences between components		
	User calibration		Errors due to the optional user calibration which is performed with a defined noise standard (ENR source) connected to the input of an LNA, and fixturing/cables used in the DUT measurement, and port 2 of the FieldFox		
Uncertainty coverage			User settable, uncertainty coverage can be set to 1 $\sigma$ (80%), 2 $\sigma$ (95% default), 3 $\sigma$ (99.5%)		
Uncertainty bars	•		Displays vertical bars representing the calculated measurement uncertainty overlaid on the trace data		
Loss compensation			User definable, single value, compensates measurement for insertion loss (dB) before DUT		
	After DUT		User definable, single value, compensates measurement for loss (dB) after DUT		
Instrument match					VSWR values are preloaded and automatically applied for instrument and U7227A/C/F or U7228A/C/F preamplifiers



Noise figure <sup>1</sup>		Internal preamplifier ON	Internal preamplifier ON + U7227/8A	Internal preamplifier ON + U7227/8C
	Frequency	(dB)	(dB)	(dB)
N991xC, N993xC	10 to 15 MHz	16.5	6.7	—
	≥ 15 MHz to 100 MHz	12.5	6.0	—
	≥ 100 MHz to 2.6 GHz	12.5	5.4	6.4
	≥ 2.6 to 4 GHz	13.5	5.4	6.5
	≥ 4 to 4.5 GHz	13.5	—	5.5
	≥ 4.5 to 6 GHz	14.5	—	5.6
	≥ 6 to 7.5 GHz	14.5		4.7
	≥ 7.5 to 10 GHz	17.5		5.3

Noise figure <sup>1</sup>		Internal preamplifier ON		Internal preamplifier ON + U7227/8F <sup>2</sup>
	Frequency	(dB)	(dB)	
N991xC, N993xC	≥ 2.1 to 2.6 GHz	12.5		10.1
	≥ 2.6 to 4 GHz	13.5		10.2
	≥ 4 to 4.5 GHz	13.5		8.3
	≥ 4.5 to 6 GHz	14.5		8.3
	≥ 6 to 7.5 GHz	14.5		8.3
	≥ 7.5 to 10 GHz	17.5		8.6

#### External preamplifier specifications

	U7227/8A	U7227/8C	U7227/8F
Frequency	10 MHz to 4 GHz	100 MHz to 26.5 GHz	2 GHz to 50 GHz
Noise figure (dB)	10 MHz to 100 MHz: < 5.5	100 MHz to 4 GHz: < 6	2 to 4 GHz: < 10
	100 MHz to 4 GHz: < 5	4 to 6 GHz: < 5	4 to 40 GHz: < 8
		6 to 18 GHz: < 4	40 to 44 GHz: < 9
		18 to 26.5 GHz: < 5	44 to 50 GHz: < 10
Gain (dB)	10 to 100 MHz: > 16	100 MHz to 26.5 GHz:	2 GHz to 50 GHz:
	100 MHz to 4 GHz: > 0.5F + 17	> 16.1 + 0.26F	> 16.5 + 0.23F
RF connector	3.5 mm (m)	3.5 mm (m)	2.4 mm (m)

<sup>&</sup>lt;sup>2</sup> U7227/8F maximum frequency is 50 GHz; can be used with N991xB or N993xB up to maximum frequency of 26.5 GHz.



<sup>&</sup>lt;sup>1</sup> Noise figure (NF) = DANL - (-173.98 - 2.51) dB Nominal calculation is based on spectrum analyzer (SA) displayed average noise level (DANL) specification (dBm) stated as input terminated, RMS detection, log averaging, 0 dB input attenuation, reference level of -20 dBm, normalized to 1 Hz RBW.

Noise figure (NF) = D - (K - L), where D is the DANL (displayed average noise level) specification, K is kTB (-173.98 dBm in a 1 Hz bandwidth at 290 K), and L is 2.51 dB (the effect of log averaging used in DANL verifications).

#### Noise source

Model	Frequency range		ENR	
346A	10 MHz to 18 GHz		5 to 7 dB	
346B	10 MHz to 18 GHz		14 to 16 dB	
U1832A	10 MHz to 18 GHz		4.5 to 6.5 dB	
U1833A	10 MHz to 18 GHz		14 to 16 dB	
Noise source setup		Supple	emental info	
ENR Mode	Spot	Single	ENR value (not frequency dependent) (default: 15 dB)	
	Table App reca		es table of ENR values vs. frequency, Create, save, edit ENR tables pe: .ENR	
T cold	Auto (default) or Noise		temperature of cold noise standard connected to DUT g the measurement	
Noise source setup		Supple	emental info	
Connector type	SMB (m)	DC bi	as requires accessory N9910X-713 BNC to SMB cable	
Control voltage drive level	28 ± 1 V			
Operating temperature	0 to 55⁰C			
Sweep				
Number of points	11 (default), 21, 51, 101	1, 201, 40	01, 601, 801, 1001	
Sweep mode	Continuous or single			
DUT profiles available (bu	ilt-in GUI wizard aids DUT	measurer	nent setup)	
DUT profiles available (bu Amplifier	ilt-in GUI wizard aids DUT Includes any non-freque		•,	
•	Includes any non-freque	ency-con	•,	
Amplifier	Includes any non-freque Frequency context can	ency-con be set to	verting device	
Amplifier Downconverter	Includes any non-freque Frequency context can	ency-con be set to be set to	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB	
Amplifier Downconverter Upconverter	Includes any non-freque Frequency context can Frequency context can	ency-con be set to be set to	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB	
Amplifier Downconverter Upconverter Multi-stage converter	Includes any non-freque Frequency context can Frequency context can	ency-con be set to be set to	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB	
Amplifier Downconverter Upconverter Multi-stage converter <b>Display formats</b> Number of traces	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available	ency-con be set to be set to	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB	
Amplifier Downconverter Upconverter Multi-stage converter Display formats	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace	ency-con be set to be set to be set to	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF	
Amplifier Downconverter Upconverter Multi-stage converter <b>Display formats</b> Number of traces	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both	ency-con be set to be set to be set to	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF	
Amplifier Downconverter Upconverter Multi-stage converter <b>Display formats</b> Number of traces	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both	ency-con be set to be set to be set to h traces c race on se	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules)	
Amplifier Downconverter Upconverter Multi-stage converter Display formats Number of traces Display formats	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory,	ency-con be set to be set to be set to h traces c race on se data and	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules)	
Amplifier Downconverter Upconverter Multi-stage converter <b>Display formats</b> Number of traces Display formats Display data	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory,	ency-con be set to be set to be set to h traces of race on se data and data trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory	
Amplifier Downconverter Upconverter Multi-stage converter <b>Display formats</b> Number of traces Display formats	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory, One memory trace per	ency-con be set to be set to be set to h traces of race on se data and data trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory	
Amplifier Downconverter Upconverter Multi-stage converter <b>Display formats</b> Number of traces Display formats Display data Trace memory Limit lines	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory, One memory trace per	ency-con be set to be set to be set to h traces of race on se data and data trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory	
Amplifier Downconverter Upconverter Multi-stage converter Display formats Number of traces Display formats Display data Trace memory Limit lines Markers	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory, One memory trace per Upper and lower for eac	ency-con be set to be set to be set to h traces of race on se data and data trace ch trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory	
Amplifier Downconverter Upconverter Multi-stage converter Display formats Number of traces Display formats Display data Trace memory Limit lines Markers Number of markers	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory, one memory trace per Upper and lower for eace 6	ency-con be set to be set to be set to h traces of race on se data and data trace ch trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory	
Amplifier         Downconverter         Upconverter         Multi-stage converter         Display formats         Number of traces         Display formats         Display formats         Display data         Trace memory         Limit lines         Markers         Number of markers         Type	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory, One memory trace per Upper and lower for eac 6 Normal, Delta, Marker T Display 6 markers	ency-con be set to be set to be set to h traces of ace on se data and data trace ch trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory e, total of 2 memory traces	
Amplifier         Downconverter         Upconverter         Multi-stage converter <b>Display formats</b> Number of traces         Display formats         Display data         Trace memory         Limit lines         Markers         Number of markers         Type         Marker table	Includes any non-freque Frequency context can Frequency context can Frequency context can Two traces available Single-trace Dual-trace overlay (both Dual-trace split (each tr Display data, memory, of One memory trace per Upper and lower for eac 6 Normal, Delta, Marker Display 6 markers Peak, Next Peak, Peak	ency-con be set to be set to be set to h traces of ace on se data and data trace ch trace	verting device RF or IF; sideband can be set to LSB, USB, DSB RF or IF; sideband can be set to LSB, USB, DSB RF or IF on one graticule) eparate top and bottom graticules) memory	



The performance listed in these sections below applies to the spectrum analyzer IF output, preamplifier, interference analyzer and spectrogram, channel scanner and 89600 VSA software capabilities available in the following models:

Description	Model number	
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C	
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C	

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

## **Spectrum Analyzer IF Output**

Spectrum analyzer mode, zero span, IF output settings<sup>1</sup>

Bandwidth options	10 MHz (Standard)	40 MHz (Opt B04)	120 MHz (Opt B10) <sup>2</sup>
IF output mode (Narrow)			
Center frequency	33.75 MHz	33.75 MHz	33.75 MHz
IF bandwidth	10 MHz	10 MHz	10 MHz
IF output mode (Wide)			
Center frequency	_	225 MHz	225 MHz
IF bandwidth	_	100 MHz	100 MHz
Conversion gain <sup>3</sup>	Center frequency	Narrowband path	Wideband path
N991xC, N993xC	< 120 MHz	9 dB to -1 dB	7 dB to 4 dB
	≥ 120 MHz to 2.6 GHz	9 dB to 2 dB	14 dB to 8 dB
	≥ 2.6 GHz to 7.5 GHz	9 dB to 2 dB	15 dB to 8 dB
	≥ 7.5 GHz to 10 GHz	5 dB to -1 dB	10 dB to 4 dB
Connector	SMB male		

# **Preamplifier (Option 235)**

	Nominal
Frequency range	Full band (3 kHz to maximum frequency of instrument)
Gain	+20 dB, 3 kHz to 10 GHz

 $<sup>^3\,</sup>$  RF input to SA output with -20 dBm input power, 0 dB attenuation, and preamp off.



<sup>&</sup>lt;sup>1</sup> Measurements are uncalibrated in IF output mode.

<sup>&</sup>lt;sup>2</sup> Not available on N9912C

# Interference Analyzer and Spectrogram (Option 236)

### Description

Spectrogram display	Overlay, full screen, top, or bottom with active trace
Waterfall angle	Moderate, steep, gradual, wide angle
Markers	Time, delta time
Trace playback and recording	-Record all spectrum analyzer measurements -Playback recorded data using FieldFox -Frequency mask trigger allows recording to occur upon trigger -Store data internally or USB or SD card

# **Channel Scanner (Option 312)**

	Description
Scan Mode	Range or custom list
Display Type	Bar chart vertical, bar chart horizontal, channel power, strip chart, chart overlay, scan & listen
Data logging mode	Time with geo tagging
Trace playback and recording	-Record channel power measurement -Playback recorded data using FieldFox -Store data internally or USB or SD card in .csv or .kml format -Data in .kml format can be exported to Google Earth



## 89600 VSA Software

EVM accuracy

Bandwidth options	10 MHz (Standard)	40 MHz (Opt B04)	120 MHz (Opt B10) <sup>1</sup>
	Nominal	Nominal <sup>2</sup>	Nominal
EVM (at center frequency 1 GHz)			
5G NR 64 QAM	_	_	1.00%
LTE-A FDD TM3.1 (10 MHz)	0.50%	0.50%	0.50%
LTE-A FDD TM3.1 (20 MHz)	_	0.50%	0.50%
WCDMA TM4 (5 MHz)	0.60%	0.60%	0.60%
EVM (at center frequency 2.1 GHz)			
LTE-A FDD TM3.1 (10 MHz)	0.60%	0.60%	0.60%
LTE-A FDD TM3.1 (20 MHz)	_	0.65%	0.65%
WCDMA TM4 (5 MHz)	0.84%	0.84%	0.84%
EVM (at center frequency 3.5 GHz)			
5G NR 64 QAM	_	_	1.00%
LTE-A FDD TM3.1 (20 MHz)	_	0.95%	0.95%
EVM (at center frequency 5.8 GHz)			
5G NR 64 QAM	_	_	1.10%

<sup>&</sup>lt;sup>2</sup> Applies when fast channel equalization (default) is OFF.



<sup>&</sup>lt;sup>1</sup> Not available to N9912C

# Over-the-Air (OTA) LTE FDD/TDD (Option 370/371)

The performance listed in this section applies to the OTA analyzer capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

Models	Options	OTA analysis frequency range <sup>1</sup>
N9912C	SA4 and 370/371	1 MHz to 4 GHz
	SA6 and 370/371	1 MHz to 6.5 GHz
	SAX and 370/371	1 MHz to 10 GHz
N9913C	233 and 370/371	1 MHz to 4 GHz
N9914C	233 and 370/371	1 MHz to 6.5 GHz
N9915C	233 and 370/371	1 MHz to 10 GHz
N9933C	370/371	1 MHz to 4 GHz
N9934C	370/371	1 MHz to 6.5 GHz
N9935C	370/371	1 MHz to 10 GHz

LTE FDD/TDD Over-the-Air (OTA) Measurements <sup>2</sup>	
Cell scan results	Frequency PCI (Physical Cell Identifier) (C/S/G) RSRP (Reference Signal Received Power) (dBm) RSRQ (Reference Signal Received Quality) (dB) RSSI (Reference Signal Strength Indicator) (dBm) PSS (Primary Synchronization Signal) (dBm) SSS (Secondary Synchronization Signal) (dBm)
	SINR (Signal to Interference & Noise Ratio) (dB) Freq Err (Frequency Error) (Hz)

<sup>&</sup>lt;sup>2</sup> For center frequency signals above 1 GHz, the built-in GPS receiver (Option 307) is highly recommended or locking to any 10 MHz frequency reference. When locked to GPS as the frequency reference, this provides accuracy of ± 0.01 ppm (spec).



<sup>&</sup>lt;sup>1</sup> Performance specified above 1 MHz. Usable down to 3 kHz.

# OTA LTE FDD/TDD (Option 370/371)

card

### LTE FDD/TDD Over-the-Air (OTA) Measurements<sup>1</sup>

Data formats	User can set up and display 1, 2, 3 or 4 simultaneous measurements of key performance indicators (KPI's) for any component carrier (CC0 through CC4), up to 5 carriers, in any combination of the following:
Table	Cell scan numeric results (for up to 6 cell sites (ID's) including PCI (C/S/G), RSRP, RSRQ, RSSI, PSS, SSS, SINR, Freq Err
Bar o	hart Vertical power bar graph of selectable cell scan results for up to 6 cell sites with adjustable color "heat" amplitude scale
Spec	rum Magnitude spectrum frequency domain (fixed span)
Strip	chart Magnitude of selectable cell scan results graphed over time
Signal bandwidth	Up to 20 MHz
Setup parameters	
Setup parameters Component carrier	CC0 to CC4
	CC0 to CC4 Sets frequency based on band and channel
Component carrier	
Component carrier Channel table	Sets frequency based on band and channel
Component carrier Channel table Favorites list	Sets frequency based on band and channel Save up to 6 favorite cellular bands/channels Any combination of 1, 2, 3, or all 4 windows can be displayed simultaneously: 1
Component carrier Channel table Favorites list Window configuration	Sets frequency based on band and channel Save up to 6 favorite cellular bands/channels Any combination of 1, 2, 3, or all 4 windows can be displayed simultaneously: 1
Component carrier Channel table Favorites list Window configuration Trigger	Sets frequency based on band and channel Save up to 6 favorite cellular bands/channels Any combination of 1, 2, 3, or all 4 windows can be displayed simultaneously: 1 2 (top & bottom), 3 (one top, two bottom), or 4 (quad display)
Component carrier Channel table Favorites list Window configuration <b>Trigger</b> Trigger type	Sets frequency based on band and channel Save up to 6 favorite cellular bands/channels Any combination of 1, 2, 3, or all 4 windows can be displayed simultaneously: 1 2 (top & bottom), 3 (one top, two bottom), or 4 (quad display)
Component carrier Channel table Favorites list Window configuration Trigger Trigger type Record / Playback	Sets frequency based on band and channel Save up to 6 favorite cellular bands/channels Any combination of 1, 2, 3, or all 4 windows can be displayed simultaneously: 1 2 (top & bottom), 3 (one top, two bottom), or 4 (quad display) Free run, external

Save/recall recorded data logs to/from internal memory or external USB or SD

<sup>&</sup>lt;sup>1</sup> For center frequency signals above 1 GHz, the built-in GPS receiver (Option 307) is highly recommended or locking to any 10 MHz frequency reference. When locked to GPS as the frequency reference, this provides accuracy of ± 0.01 ppm (spec).



Saving data

# Over-the-Air (OTA) 5G NR (Option 378)

The performance listed in this section applies to the OTA 5G NR analyzer capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

Models	Options	OTA analysis frequency range <sup>1</sup>
N9912C	SA4 and 378	1 MHz to 4 GHz
	SA6 and 378	1 MHz to 6.5 GHz
	SAX and 378	1 MHz to 10 GHz
N9913C	233 and 378	1 MHz to 4 GHz
N9914C	233 and 378	1 MHz to 6.5 GHz
N9915C	233 and 378	1 MHz to 10 GHz
N9933C	378	1 MHz to 4 GHz
N9934C	378	1 MHz to 6.5 GHz
N9935C	378	1 MHz to 10 GHz

<sup>&</sup>lt;sup>1</sup> Performance specified above 1 MHz. Usable down to 3 kHz.



## **OTA 5G NR**

5G NR Measurements<sup>1</sup>

5G NR Over-the-Air (OTA)	
Cell scan results	Frequency PCI (Physical Cell Identifier) (C-S-G) (Cell ID-Sector ID-Group ID) SSB Index (Synchronization Signal Block Index) SS-RSRP (Synchronization Signal Reference Signal Received Power) (dBm) SS-RSRQ (Synchronization Signal Reference Signal Received Quality) (dB) RSSI (Received Signal Strength Indicator) (dBm) SS-SINR (Synchronization Signal Signal-to-Noise and Interference Ratio) (dB) PSS (Primary Synchronization Signal) (dBm) SSS (Secondary Synchronization Signal) (dBm) PBCH DMRS (Physical Broadcast Channel Demodulation Reference Signal) (dBm) Freq Err (Frequency Error) (Hz)
	Frequency
Cell scan results	<ul> <li>Frequency</li> <li>PCI (Physical Cell Identifier)</li> <li>SSB Numerology (Synchronization Signal Block Numerology)</li> <li>SSB Case (Synchronization Signal Block Case)</li> <li>SSB Lmax (Maximum Number SSB's within SSB Set, Lmax = 4, 8 or 64)</li> <li>SSB Periodicity (ms)</li> <li>SSB RB Offset (Synchronization Signal Block Resource Block Offset)</li> <li>SSB SC Offset (Synchronization Signal Block Subcarrier Offset)</li> <li>SSB Delta Center (Synchronization Signal Block Delta Center) (kHz) <sup>2</sup></li> <li>Sync Corr (Synchronization Correlation) (%)</li> <li>Channel Power (dBm)</li> <li>Freq Err (Frequency Error) (Hz)</li> <li>Time Offset (ms)</li> <li>PSS EVM (Primary Synchronization Signal EVM) (%rms)</li> <li>SSS EVM (Secondary Synchronization Signal EVM) (%rms)</li> <li>PBCH EVM (Physical Broadcast Channel EVM) (%rms)</li> <li>PBCH DMRS EVM (Physical Broadcast Channel Demodulation Reference Signal EVM) (%rms)</li> <li>Composite EVM (%rms)</li> <li>SS-RSRP (Synchronization Signal Reference Signal Received Power) (dBm)</li> <li>SS-RSRQ (Synchronization Signal Reference Signal Received Quality) (dB)</li> <li>RSSI (Reference Signal Strength Indicator) (dBm)</li> </ul>
	PSS Power (Primary Synchronization Signal Power) (dBm) SSS Power (Secondary Synchronization Signal Power) (dBm) PBCH Power (Physical Broadcast Channel Power) (dBm) PCBCH DMRS Power (Physical Broadcast Channel Demodulation Reference Signal Power) (dBm)



For center frequency signals above 1 GHz, the built-in GPS receiver (Option 307) is highly recommended or locking to any 10 MHz frequency reference. When locked to GPS as the frequency reference, this provides accuracy of  $\pm$  0.01 ppm 1 <sup>(spec).</sup>
 <sup>2</sup> Synchronization Signal Block Subcarrier Offset is the offset of the Synchronization Signal Block from the center of the channel.

5G NR Measurements <sup>1</sup>	
Signal bandwidth	Up to 100 MHz (Requires Option B10)
Component carrier	CC0 to CC7 (5G NR over-the-air (OTA) measurements)
	CC0 to CC4 (5G NR conducted EVM measurements)
Data formats	User can set up and display 1, 2, 3 or 4 simultaneous measurements of key performance indicators (KPI's) for any component carrier, in any combination of the following <sup>1</sup> :
Table	Cell scan numeric results (for up to 6 cell sites (ID's)
Bar chart	Vertical power bar graph of selectable cell scan results for up to 6 cell sites with adjustable color "heat" amplitude scale
Spectrum	Magnitude spectrum frequency domain (fixed span)
Strip chart	Magnitude of selectable cell scan results graphed over time
Window configuration	Any combination of 1, 2, 3, or all 4 windows can be displayed simultaneously: 1, 2 (top & bottom), 3 (one top, two bottom), or 4 (quad display)
Setup parameters	
5G NR Over-the-Air (OTA)	
Frequency error threshold	0 Hz to 7.5 kHz <sup>2</sup>
Subcarrier spacing	15 kHz, 30 kHz, 120 kHz, 240 kHz
SSB case	Auto, A, B, C, D, E
Lmax	Auto, 4, 8, 64
Capture length	4, 8, 16, 24, 32 or 40 frames
Drive speed	Low, medium, high
SS Meas DMRS	Off, On
Phase compensation	Off, On
EMF Measurement	Off, On
EMF Units	dBµV/m, V/m
5G NR Conducted EVM	
Cell ID	Auto, Manual
Bandwidth	FR1: 5, 10, 15, 20, 25, 30, 40, 50, 60, 70, 80, 90, 100 MHz
	FR2: 50, 100 MHz
Subcarrier spacing	15 kHz, 30 kHz, 120 kHz, 240 kHz
Export results	Exports SSB center frequency, SSB subcarrier spacing, SSB Case and SSB Lmax to 5G NR OTA setup
Trigger	
Trigger type	Free run, external, periodic trigger
Record / Playback	
Data logging	Record, recall and playback data for all component carrier(s)
Record settings	Meas Interval, Interval type (time or distance), time interval, distance interval
Supported file types	CSV, KML
Saving data	Save/recall recorded data logs to/from internal memory or external USB or SD card

You can also display the results from multiple component carriers on the table, bar chart, and strip chart displays.
 The frequency error threshold is dependent on the SCS - freq err threshold = +/- 1/4 \* SCS (e.g. for 15 kHz, freq err threshold = 3.75 kHz).



# Indoor and Outdoor Mapping (Option 352)

The performance listed in this section applies to the indoor and outdoor mapping capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

Option 352 adds indoor and outdoor mapping capability to FieldFox analyzers, so that FieldFox can import maps from OpenStreetMap (OSM) for data collection and data plotting to the map directly on the FieldFox instrument display. The FieldFox indoor and outdoor mapping feature resides at the System level and the mapping capability can be enabled within the following modes:

- Channel Scanner (Option 312)
- Phased Array Antenna Support (Option 360)
- Over-the-Air (OTA) LTE/TDD FDD (Option 370/371)
- Over-the-Air (OTA) 5G NR (Option 378)
- Indoor and outdoor mapping (Option 352) requirements:
- GPS receiver (Option 307), required for outdoor mapping

OSM maps can be saved to the FieldFox internal memory, SD card or USB drive. This can be done via a direct wired LAN connection or OSM maps can be downloaded and saved to FieldFox using the FieldFox Map Support Tool.

	Description
Map coordinates	Latitude, longitude
Map zoom levels	4 to 17
Map icons	Flag, point, line
Map labels	On, Off
Map panorama	North, South, East, West
Data logging	Record, recall and playback
Indoor map file type	PNG

Using a direct wired LAN connection, FieldFox will automatically access OSM once location coordinates (latitude and longitude) and zoom levels are entered the Map Explorer menu. If using the FieldFox Map Support Tool, OSM map files can be downloaded to a .zip file and imported to FieldFox internal memory. If the FieldFox GPS receiver is enabled and OSM maps have been previously saved to FieldFox with those GPS coordinates, FieldFox can automatically load the corresponding map to match the GPS coordinates.



# **EMF Measurements (Option 358)**

The performance listed in this section applies to the electromagnetic field (EMF) measurement capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

	Description
Supported antenna	AGOS Advanced Technologies, Triaxial Isotropic Antenna Model: SDIA-6000 (or, 85572A-006 if ordered directly from Keysight) Frequency coverage: 30 MHz to 6 GHz
Supported operating modes	Spectrum analyzer (Channel Power measurement only) Over-the-Air (OTA) 5G NR
Antenna axis	Average all (Isotropic), X-axis, Y-axis, Z-axis
Units	Spectrum analyzer mode: dBuV/m, dBm/m <sup>2</sup> , V/m, Watt/cm <sup>2</sup> , W/m <sup>2</sup> , dBµA/m, dBG, dBpT Over-the-Air (OTA) 5G NR mode: V/m, dBµV/m
Measurement time	Sweep time acquisition control can be set from 1 to 5000
Data logging	Record, recall and playback data
Supported file types	Spectrum analyzer mode: CSV Over-the-Air (OTA) 5G NR mode: CSV, KML
Saving data	Save/recall recorded data logs to/from internal memory or external USB or SD card



# AM/FM Analog demodulation, Tune and Listen (Option 355)

The performance listed in this section applies to the AM/FM analog demodulation, tune and listen capabilities available in the following models:

Description	Model number
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

	Description		
Display type	RF spectrum view, demodulated waveform, including peak+ and peak- traces		
Audio demodulation type	AM, FM narrow, FM wide, listen to the tones using FieldFox's built-in speaker or headphones		
Audio bandwidth	16 kHz		
Measurement type	RF carrier power (dBm), RF carrier frequency (Hz), modulation rate (Hz), SINAD (dB), THD (%)		
Receiver IF bandwidth	Nominal		
AM	35 kHz		
FM narrow	12 kHz		
FM wide	150 kHz		
Listen time range	0 to 100 seconds		
AM & FM metrics	Nominal		
SINAD	2.5 dB to 65 dB		
THD	0 to 75%		
AM measurements	Nominal		
Maximum modulation rate	5 kHz, demod sweep time: 50 μs to 50 ms		
Depth	(peak-to-peak/2) (%), ± peak depth (%)		
Depth accuracy	±2%		
Depth range	Modulation: 0.1 % to 99%		
FM measurements	Nominal		
Maximum FM deviation and maximum FM rate	FM deviation and FM rate must satisfy Carson's formula for the frequency span used: 2*(max FM deviation + max FM rate) < frequency span		
Frequency deviation	(Hz), ± peak deviation (Hz)		

## **Radio standards**

With a radio standard applied, pre-defined frequency bands, channel numbers or uplink / downlink selections can be used instead of manual frequency entry. The pre-defined FieldFox radio standards include bands such as W-CDMA, LTE, and GSM. Alternately, users can create custom standards and import them into FieldFox analyzers.

# **Spectrum Analyzer Time Gating (Option 238)**

With time gating, you can measure the spectrum of a periodic signal during a specified time interval. Pulsed-RF signals are an example of a periodic signal that can be measured with time gating. For example, you can measure the pulse during the on period, not the transition or the off period. Or you can exclude interfering signals such as a periodic transient. Time gating allows you to view spectral components that would otherwise be hidden. FieldFox's time gating method is a Gated FFT.

	Description	
Gate method	Gated FFT	
Span range	Any span	
RBW range	1 Hz to 300 kHz (derived from gate width)	
Gate delay range	-150 ms to 10 s	
Gate width (length) range	6 µs to 1.8 s	
Gate sources	External, RF burst, Video	

# Reflection Measurements (RL, VSWR) (Option 320, applicable to SA only models)

The performance listed in this section applies to the reflection measurements capabilities available in the following models:

Description	Model number
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

	Models	Reflection Measurements
N993xC	N9933C	3 kHz to 4 GHz
	N9934C	3 kHz to 6.5 GHz
	N9935C	3 kHz to 10 GHz

### Measurements

Return loss, VSWR normalization using data/memory (requires Option 220 tracking generator)



# Extended Range Transmission Analysis (ERTA) (Option 209)

ERTA specifications apply to the following FieldFox models. The RF & microwave analyzers must be equipped with the spectrum analyzer option.


Description	Model number
FieldFox RF (combination) analyzers	N9913C, N9914C, N9915C (N9912C excluded)
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

## **System description**

ERTA can be used to measure the scalar transmission gain or loss of an RF system. It is useful when measuring long lossy cables where the two ends cannot easily be brought together, such as those bolted in on ships or aircrafts. It is also useful in measuring the insertion loss of waveguide systems, or using the frequency-offset feature, devices such as mixers and converters.

ERTA measurements are based on two FieldFox units; one at each end of the measured DUT. One FieldFox is the source and reference receiver (R), while the other is the measurement receiver (B). The two FieldFox units are synchronized using hardware triggering. By taking advantage of FieldFox's InstAlign technique, ERTA can be used to make accurate gain or loss measurements.

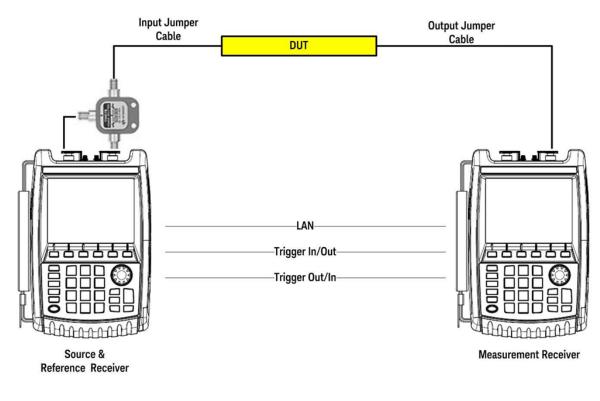



# ERTA

## **Frequency specifications**

The ERTA frequency range is limited by each individual analyzer's frequency range.

	Models	Source frequency range	Receiver frequency range
N991xC, N993xC	N9913C, N9933C	3 kHz to 4 GHz	3 kHz to 4 GHz
	N9914C, N9934C	3 kHz to 6.5 GHz	3 kHz to 6.5 GHz
	N9915C, N9935C	3 kHz to 10 GHz	3 kHz to 10 GHz
Frequency reference			
Refer to the frequency a	ccuracy specifications.		
Source output power			
Refer to the test port out	put power typical data.		
Frequency setup paramet	ers		
Receiver frequency		tart/stop (standard spectrum an sweep direction (default directi	
FieldFox's receiver frequen FieldFox's receiver is swep		s source can be set to a CW fre er frequency. FieldFox's source er is swept. FieldFox's source CW frequenc	equency independent of a is at a single CW frequency;
frequency can be negati	ieldFox's source frequency t	to be offset from FieldFox's reco quency-offset capability is usefu	
Frequency-offset setup			
Receiver frequency	Center/span or st	tart/stop (standard spectrum an sweep direction (default direction)	
Frequency tracking offse	et On/Off Offset values: 0,	> 0, < 0	
Receiver sweep direction	Default setting Both source and	receiver sweep in the forward c eiver start frequency	lirection. Receiver stop

Source frequency = Offset + Receiver frequency

Reversal: On Source and receiver sweep in opposite directions. Source frequency = Offset – Receiver frequency Offset > receiver frequency



# **Built-in Power Meter (Option 310)**

The performance listed in built-in power meter, external USB power sensor support, pulse measurements, USB power sensor measurements versus frequency sections applies to the capabilities available in the following models:

Description Model number	
FieldFox RF (combination) analyzers	N9912C, N9913C, N9914C, N9915C
FieldFox RF spectrum analyzers	N9933C, N9934C, N9935C

See FieldFox Configuration Guide for option information. Many capabilities listed in this Data Sheet require options.

Using the built-in power meter, FieldFox is able to make very accurate channel power measurements. The channel bandwidth can be set wide to simulate average power meter measurements. This measurement function provides the flexibility to make user definable channel power measurements.

	Description	
Setup parameters	rs Center frequency, including selection of radio standards and channel selection, span or channel width Relative/absolute measurements, offsets, units of dBm or Watts, or dB or %, minimum and maximum limits	
Functions		
Models	Options	Frequency range
N9912C	SA4 and 310	3 kHz to 4 GHz
	SA6 and 310	3 kHz to 6.5 GHz
	SAX and 310	3 kHz to 10 GHz
N9913C	233 and 310	3 kHz to 4 GHz
N9914C	233 and 310	3 kHz to 6.5 GHz
N9915C	233 and 310	3 kHz to 10 GHz
N9933C	310	3 kHz to 4 GHz
N9934C	310	3 kHz to 6.5 GHz
N9935C	310	3 kHz to 10 GHz

#### Total absolute amplitude accuracy (dB)

10 dB attenuation, input signal -15 to -5 dBm, peak detector, 300 Hz RBW, all settings auto-coupled, includes frequency response uncertainties. No warm-up required.

N991xC, N993xC		Spec (-10 to 55°C)	Typical (-10 to 55°C)
	3 kHz to 100 kHz	± 1.00	± 0.20
	≥ 100 kHz to 15 MHz	± 0.80	± 0.23
	≥ 15 MHz to 500 MHz	± 0.80	± 0.28
	≥ 500 MHz to 4.5 GHz	± 1.00	± 0.25
	≥ 4.5 GHz to 10 GHz	± 1.20	± 0.29



# External USB Power Sensor Support (Option 302)

The external USB power sensor option supports various Keysight USB power sensors. For an up-to-date listing of the supported power sensors, visit http://www.keysight.com/find/fieldfoxsupport

	Description
Setup parameters	Frequency
Functions	Relative/absolute measurements, offsets, units of dBm or Watts, or dB or %, minimum and maximum limits.
Internal source	FieldFox's internal source can be turned on in the USB power sensor mode. CW frequency and nominal power level control are available.

## **Pulse Measurements (Option 330)**

FieldFox's pulse measurement option can be used to characterize RF pulses such as those used in radar and electronic warfare systems. Measurements are made using FieldFox and Keysight's USB peak power sensors.

Performance specifications such as frequency, dynamic range and minimum pulse width depend on the peak power sensor. Supported peak power sensors: http://www.keysight.com/find/fieldfoxsupport

	Description		
Setup parameters	Frequency, time (center), time/division, gating, triggering, video bandwidth, averaging		
Functions	Average power, peak power, and peak to average ratio Analog gauge display and digital display, dBm and Watts		
	Relative/absolute measurements, offset, dB or %, minimum and maximum limits		
Trace graph for pulse profiling with gating			
	Rise time, fall time, pulse width, pulse period, pulse repetition frequency		



# USB Power Sensor Measurements versus Frequency (Option 208)

This feature allows FieldFox's source frequency to be set independently from the power sensor (receiver) frequency. With frequency-offset using power sensor (FOPS), the frequency of both the source and receiver are swept, and the two track each other. The offset frequency can be negative, zero, or positive.

FOPS can be used to characterize the scalar transmission response of devices such as mixers and converters. This frequency-offset capability is necessary for conversion loss/gain measurements on frequency-translating devices, since by definition, the input and output frequencies of the DUT are different. The FieldFox source stimulates the DUT and the power sensor is used as the measurement receiver.

Since power sensors are inherently broadband devices (not frequency-selective), the user should ensure that only the signal of interest is present at the power sensor input and that all other signals are filtered appropriately.

Source frequency	Center/span or start/stop	
Receiver frequency	Range determined by power sensor range	
Frequency offset	Positive offset or negative offset	
Frequency step size	30 kHz minimum	
Number of points	2 to 1601 (Combination of number of points and frequency step size limited by span.)	
Dwell time/point	0 to 1.0 sec	

#### Setup parameters

Source frequency span must be equal to receiver frequency span.

Receiver sweep direction: forward (default setting) or reverse.

For some DUTs, the output frequency may sweep in a reverse direction, as compared to the source frequency. The basic relationships between the source, receiver and offset frequencies are shown in the table below. The FieldFox analyzer includes an offset calculator that ensures a fast measurement setup.


Src sweep direction	Rx sweep direction	Frequency calculations
Forward f2 <sub>src</sub> > f1 <sub>src</sub>	Forward $f2_{rx} > f1_{rx}$	Receiver frequency = Source frequency ± Offset
Forward f2src > f1src	Reverse f2 <sub>rx</sub> > f1 <sub>rx</sub>	Receiver frequency = Offset - Source Frequency Offset > Source frequency



	Description Source power, gain/loss and receiver (Rx) power	
Measurements		
	Gain = Rx power / source power (memory). Source power (memory) is measured during setup.	
Output power	Refer to the test port output power typical data on page 5.	
Dynamic range	The dynamic range with FOPS is dependent on FieldFox's output power and the power sensor's dynamic range. Supported USB power sensors: www.keysight.com/find/fieldfoxsupport	

The graph below shows a filter measurement using two different power sensors, the U2002A (- 60 to +20 dBm) and the U2021XA (- 45 to +20 dBm). While a filter is not commonly measured using FOPS, it is a useful device for demonstrating dynamic range.

For both measurements, the FieldFox source power was set to - 1 dBm, the maximum available in the selected frequency range of 7.25 to 13.25 GHz. An external amplifier was not used in this case, but one can be added to increase the source power and hence dynamic range.

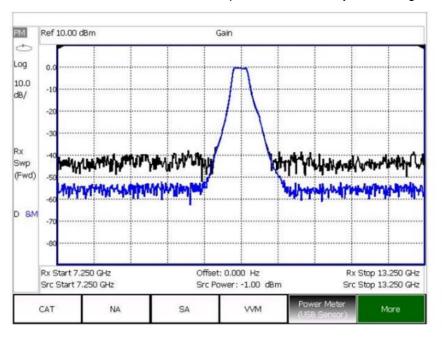

Measured using U2021XA power sensor

Example showing typical dynamic range of FOPS

# Built-In GNSS (GPS+) Receiver (Option 307)

	Description	
GNSS (GPS+) receiver	The internal GNSS/GPS receiver can be used as a frequency reference. <sup>1</sup>	
Supported systems	GPS, GLONASS, BeiDou and Galileo	
Modes	Off, internal, external	
Sync clock	On, off	
Functionality	Geo-location: latitude, longitude, altitude (elevation), time, sync time/date	
	Requires external GNSS/GPS antenna (can use N9910X-825, GPS active antenna)	
Connector for antenna	SMA (f), 3.3 or 5 V	
Maximum DC current	20 mA	

# DC Bias Variable-Voltage Source (Option 309)

	Description	
	Nominal	
Connector	SMB (m)	
Voltage	+1 to +32 V	
Resolution	0.1 V	
Maximum current <sup>2</sup>	0.65 A	
DC current readout resolution	0.01 A	
Maximum power <sup>2</sup>	7 watts	
Display read out	Voltage, current	
Overload trip protection	Automatically engages when voltage source is on. The trip circuit can be reset from front panel without pre-setting or power cycling the analyzer.	

<sup>&</sup>lt;sup>2</sup> Battery life will be reduced when DC source is used. A trip function turns off the power supply when the rated current or power is exceeded.



<sup>&</sup>lt;sup>1</sup> External GPS USB receivers can be used to provide geo-location data. However, they cannot be used for frequency reference locking.

# **Remote Control Capability (Option 030)**

Option 030 adds remote control capability to FieldFox analyzers, so that FieldFox can be controlled via an iOS device, or an Android device. The FieldFox app, running on the iOS/Android device, combined with Option 030 on the FieldFox analyzer provides full control of the instrument from a remote location. The app emulates the front panel of FieldFox, so users can press the FieldFox hard keys or softkeys using their iPhone/iPad, or Android mobile device and make measurements remotely. For example, a tower climber can be on the tower with a FieldFox analyzer, while the technician controls and makes the measurements down below, using an iPhone. The iPhone and FieldFox communicate via a network connection.

iOS device requirements	Android device requirements
iPad, iPhone, or iPod Touch	Android phone or tablet
iOS of 6.1 or higher	Android OS of 9.0 or higher
A WiFi or cellular network connection	A WiFi or cellular network connection

The FieldFox app communicates with FieldFox via a network connection, so both the iOS/Android device and FieldFox need to be on a network where both devices can reach the other. For example, a company intranet or a site installation using a wireless router. FieldFox can directly be connected to a LAN cable, or if wired LAN is not available, a user supplied wireless router can be configured to work with FieldFox. FieldFox does not include a wireless router.

## FieldFox app without Option 030

The FieldFox app can be installed on an iOS/Android device independent of the presence of Option 030 on the analyzer. Without Option 030, users can view the live display screen of their FieldFox remotely but cannot control the instrument. With 030 purchased and installed on their FieldFox, users can both view and control their FieldFox. Control refers to the ability to press hard keys, softkeys, make or change measurements, etc. Option 030 does not include the iOS or Android device itself. Users must supply their own iOS or Android device. Option 030 is a license on the FieldFox analyzer. Option 030 and the FieldFox app are not applicable to BlackBerry or Windows phone/tablet devices. FieldFox can be remote controlled via PC software using a wireless or wired LAN connection. FieldFox Data Link software provides a remote display tool with a virtual keypad that allows remote access to the FieldFox display (Option 030 not required).



## **General Information**

**Calibration cycle** 

and the second secon		
	1 year	
Weight		
	3.34 kg or 7.35 lb. including battery (approx.)	
Dimensions: H x W x D		
	292 x 188 x 82 mm (11.5 in x 7.4 in x 3.2 in) (approx.)	
Environmental		
verified to be robust against the include but are not limited to ter	een type tested in accordance with the Keysight Environmental Test Manual and environmental stresses of Storage, Transportation and End-use; those stresses nperature, humidity, shock, vibration, altitude and power line conditions. EC 60068-2 and levels are similar to MIL-PRF-28800F Class 2.	
Maximum humidity	Maximum relative humidity (non-condensing): 95% relative humidity up to 40°C, decreases linearly to 45% relative humidity at 55°C <sup>1</sup>	
Altitude – operating	9,144 m or 30,000 ft (using battery)	
Altitude – Non-operating	15,240 m or 50,000 ft	
Altitude – AC to DC adapter	3,000 m or 9,840 ft	
Ingress protection		
	This product has been type tested to meet the requirements for ingress protection IP53 in accordance with IEC/EN 60529 (IP rating for instrument by itself, with no cover).	
Temperature range		
Operating, AC power, spec <sup>2</sup>	-10 to 55°C (14 to 131°F) (-10 to 45°C/14 to 113°F in RTSA mode)	
Operating, battery, spec	-10 to 50°C (14 to 122°F)	
Operating, battery, typical	-10 to 55°C (14 to 131°F)	
Storage, spec <sup>3,4</sup>	-51 to 71°C (-60 to 160°F)	
	equirements of the European Radio Equipment Directive as well as current editions of the ons are cited in the Declaration of Conformity):	
	IEC/EN 61326–1	
-	EN 301 489-1, EN 301 489-19	
	CISPR Pub 11 Group 1, Class B	

AS/NZS CISPR 11

ICES/NMB-001(B)

This ISM device complies with Canadian ICES-001

Cet appareil ISM est conforme a la norme NMB-001 du Canada.

<sup>&</sup>lt;sup>4</sup> Power supply: -40°C to 85°C (-40°F to 185°F).



 $<sup>^1~</sup>$  From 40°C to 55°C, the maximum % relative humidity follows the line of constant dew point.

<sup>&</sup>lt;sup>2</sup> Power supply: 0 to 40°C at 90 W output rating, derate linearly at 3 watts per degree C, to 45 W at 55°C, 30 W at -20°C.

<sup>&</sup>lt;sup>3</sup> The battery packs should be stored in an environment with low humidity. Extended exposure to temperature above 45°C could degrade battery performance and life.

#### South Korean Class A EMC declaration

This equipment has been conformity assessed for use in business environments. In a residential environment this equipment may cause radio interference.

사용자안내문
기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 용 환경에서 사용하는 경우 전파간섭의 우려가 있습니다.

#### ※ 사용자 안내문은 "업무용 방송통신기자재"에만 적용한다.

Radio Equipment (GNSS): Complies with the essential requirements of the European Radio Equipment Directive:

	EN 303 413	
Acoustic statement (European	Machinery Directive):	
	Acoustic noise emission LpA <70 dB Operator position Normal operation mode per ISO 7779	
-	sential requirements of the European Lov ards (dates and editions are cited in the D	•
	IEC/EN 61010-1	
	Canada: CSA C22.2 No. 61010-1	
	USA: UL std no. 61010-1	
	of Conformity for a specific Keysight produ	ct, go to:
http://www.keysight.com/go/co	лпонниу	
http://www.keysight.com/go/co Explosive environment	mornity	
Explosive environment	This product has been type tested to me explosive environments in accordance of Procedure I.	
Explosive environment	This product has been type tested to me explosive environments in accordance	
Explosive environment	This product has been type tested to me explosive environments in accordance	
Explosive environment Power supply External DC input	This product has been type tested to mexplosive environments in accordance procedure I. 15 to 19 VDC, 4 amps maximum when battery	
Explosive environment Power supply	This product has been type tested to me explosive environments in accordance Procedure I. 15 to 19 VDC, 4 amps maximum when battery charging	
Explosive environment Power supply External DC input External AC power adapter	This product has been type tested to mexplosive environments in accordance of Procedure I. 15 to 19 VDC, 4 amps maximum when battery charging Efficiency level VI 100 to 240 VAC, 50 to 60 Hz,	



ballery		
Lithium ion	10.8 V, 6.4 A-h, 70 Wh	
Operating time	4 hours (typical), mode dependent	
Charge time	A fully discharged battery takes about 1.5 hours to recharge to 80%. Four hours to 100%.	
Discharge temperature limits	-10 to 60°C, ≤ 85% RH	
Charge temperature limits	0 to 45°C, ≤ 85% RH	
Storage temperature limits	-20 to 50°C, ≤ 85 % RH	
	The battery packs should be stored in an environment with low humidity. Extended exposure to temperatures above 45°C could degrade battery performance and life	
Test port connectors		
	Type-N (f)	
Display		
	6.5" translective color LCD-LED backlit	
Headphone jack connector		
	3.5 mm (1/8 inch) miniature audio jack	
USB-A, 2-ports		
	Hi-speed USB 2.0	
Mini USB, 1 port		
	Hi-speed USB 2.0; used for SCPI programming; USBTMC (USB IEEE488)	
Keyboard		
	USB keyboards are supported (user must supply their own keyboard)	
LAN		
Connector	RJ-45	
	Used for programming, data saving, remote control, and connection to DataLink software	
	1000/100/10 base-T (auto switching)	
	SCPI over LAN using sockets and VX11 (LAN IEEE488); HTTP	
Programming		
	SCPI, using the built-in LAN interface, PathWave BenchVue	
Languages		
	English, Spanish, German, Italian, French, Russian, Japanese, Chinese, Turkish, Korean, and Portuguese	
Preset		
	set and complete system preset	



### Limit lines

The limit line capabilities listed in this section apply to the cable and antenna analyzer, network analyzer and spectrum analyzer modes in all FieldFox analyzers.

Limit lines can be a combination of horizontal lines, sloping	Max limit line number of points: 10,001
lines, or discrete data points	Beep: Beep off, Beep on fail, Beep on pass
Limit types: Fixed or relative	Pass/fail warning: on/off
Each trace can have its own limit line	Offset and margin: An increase or decrease in the
Limit lines can be built from a current trace	limit line
Limit segments > 100, limited by memory size	Save/recall limit lines

### Data storage

Internal	Internal Minimum: 4 GB	
	Minimum states and traces: 1000	
External	Supports USB 2.0 compatible memory devices and SD/SDHC memory cards with FAT and exFAT format Trace, trace+state, picture (png), data (csv), S1P, S2P	
Data types		
Secure operation		
Secure operation Frequency blanking	For protection of sensitive data all frequency information can be turned off.	


### Reference out/trigger out

Connector	SMB (m), 50 Ω
Output amplitude	≥ 0 dBm
Frequency	10 MHz (1 + frequency reference accuracy)
Trigger out	Reserved for future use; currently only used for ERTA 2-box handshaking
Reference in/trigger in	
Reference in/trigger in Connector	SMA (f), 50 Ω
	SMA (f), 50 Ω 10 MHz, - 5 to +10 dBm



# **FieldFox Physical Dimensions**

## FieldFox models with Type-N test port connectors

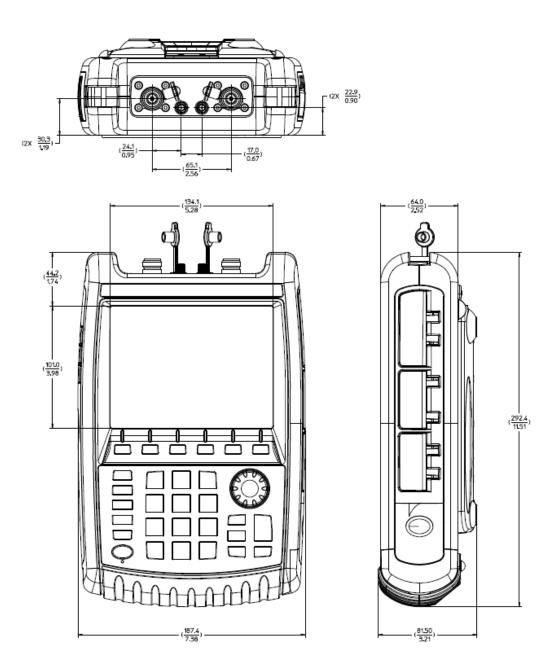

# **Carry Precision with You**

Every piece of gear in your field kit had to prove its worth. Measuring up and earning a spot is the driving idea behind Keysight's FieldFox analyzers. They're equipped to handle routine maintenance, in-depth troubleshooting, and anything in between. Better yet, FieldFox delivers precise microwave measurements—wherever you need to go. Add FieldFox to your kit and carry precision with you.

Related literature	Publication number
FieldFox Handheld Analyzers, Configuration Guide	5992-3701EN
FieldFox Handheld Analyzers, Technical Overview	5992-3703EN

Download application notes, watch videos, and learn more: www.keysight.com/find/fieldfox

Keysight enables innovators to push the boundaries of engineering by quickly solving design, emulation, and test challenges to create the best product experiences. Start your innovation journey at www.keysight.com.



This information is subject to change without notice. © Keysight Technologies, 2023, Published in USA, October 17, 2023, 3123-1696.EN